

ATW_G7 Interface Protocol

Revision: V1.16

Revision	Date	Author	Description
1.00	2018-12-12	Jiazhong Pei	initial
1.01	2019-01-09	Jiazhong Pei	Remove repo mode from GTRTO Remove RF off delay from GTFRI Add Delay to sleep into GTWMS
1.02	2019-02-21	Jiazhong Pei	Add RESP:GTWIFR Modify RESP:GTFRI
1.03	2019-03-01	Jiazhong Pei	Modify RESP:GTINF Modify RESP:GTBAT Modify GTHBD
1.04	2019-04-08	Jiazhong Pei	Modify the command of GTAGP Modify the command of GTWMS Added the current working network into RESP:GTGSM
1.05	2019-04-11	Jiazhong Pei	Modify RESP: GTWMS
1.06	2019-04-16	Nie Jian	1.Add BCK 2.Add Battery Percentage in the GTLBC、GTGCR、GTHIS、GTGPS、GTEPN、GTEPF、GTBPL、GTBTC、GTSTC、GTSTT、GTSWG、GTGSM、GTWMS、GTDSW 3.Add CSQ RSSI in Position Related Report 4.Change Non_Movement Duration(x15s) to Non_Movement Duration(x5s) 5.Improve Report type resolution of GTSOS、GTPNL、GTDG 6.Add <WMS Working Mode>and<Network> in all report except GTHIS 7.Add <Location Mode > in the GTWIF 8.Add +RESP:GTNFR(Location report sent after the device is stationary) 9.Change the min value of GTFRI<Check Interval > to 3 10.Modify RESP: GTGSM
1.07	2019-04-24	Nie Jian	1. Add GTRTO 1A Related description

			2. Add Heartbeat package description 3. Add a notice about log mode. 4. Change the min value of GTWMS<Pursuit Interval > to 3
1.08	2019-04-28	Jiazhong Pei	1. Modify Heartbeat package description. 2. Modify RESP: GTHIS 3. Modify Log mode of GTWMS
1.09	2019-06-05	NieJian	1.Change the mode range of the GTQSS
1.10	2019-07-26	Nie Jian	1.Perfect GTWMS Related description 2.Perfect GTHBD Related description 3.add description about send report GTFRI when detects non-movement
1.11	2019-08-08	Nie Jian	1.In the Flight mode of GTWMS ,add description about send RESP:GTDSW before reboot
1.12	2019-08-12	Nie Jian	1.Perfect description of Location Mode
1.13	2019-08-27	Nie Jian	1. Perfect description of GTWMS 2. Add Enable Hearbeat after shutdown in RESP:GTALL 3. Perfect description about Hearbeat T 4. Change the min value of Gsm interval to 5
1.14	2019-12-11	Nie Jian	1.Change non-movement duration to 6
1.15	2020-4-20	Nie Jian	1.Add description about <i>Pursuit Duration</i> 2.Delete description about Ignition
1.16	2020-12-26	Jiazhong Pei	1,Modify the description of the Enable Hearbeat after shutdown

General Notes

Copyright

The copying of this document, distribution to others, and communication of the contents thereof, are forbidden without express authority. Offenders are liable to the payment of damages. All rights are reserved in the event of a patent grant or the registration of a utility model or design. All specification supplied herein are subject to change without notice at any time.

Contents

1. Overview.....	7
1.1.Scope.....	7
1.2.Terms and Abbreviations.....	7
2. System Architecture.....	8
3. Message Description.....	9
3.1. Message Format.....	9
3.2. Command and Acknowledgement.....	11
3.2.1.Quick Start Setting.....	11
3.2.2. Bearer Setting Information.....	16
3.2.3. Backend Server Register Information.....	17
3.2.4. Global Configuration.....	18
3.2.5. Non movement detection.....	22
3.2.6. Time Adjustment.....	24
3.2.7. Fixed Report Information.....	25
3.2.8. Geo-Fence Information.....	28
3.2.9. Speed Alarm.....	30
3.2.10. Function Key Setting.....	32
3.2.11. Real Time Operation.....	34
3.2.12. White Call List Configuration.....	37
3.2.13. Google link SMS configuration.....	38
3.2.14. Protocol watchdog(optional).....	39
3.2.15. WIFI Settings.....	40
3.2.16. AGPS Setting.....	42
3.2.17. Temperature detection.....	43
3.2.18. Auto unlock SIM-PIN.....	44
3.2.19. Working Mode Switch.....	45
3.3. Report.....	48
3.3.1. Position Related Report.....	48
3.3.2. Device Information Report.....	57
3.3.3. WLAN Information Report.....	59
3.3.4. Report for Querying.....	61
3.3.5. Event Report.....	72
3.3.6. Buffer Report.....	84
3.3.7. Report Google Maps hyperlink.....	84
3.3.8. Temperature Report.....	85
3.3.9. Exception Report.....	86
3.4.Heartbeat.....	87
3.5.Sever Acknowledgement.....	88
4. LED Indication.....	89
Appendix: Message Index.....	90

Table Index

TABLE 1: TERMS AND ABBREVIATIONS.....	5
---------------------------------------	---

Figure Index

FIGURE 1:SYSTEM ARCHITECTURE.....	6
FIGURE 2: PROTOCOL MESSAGES FLOW.....	7

1. Overview

1.1.Scope

The Interface Protocol is a digital communication interface based on printable ASCII characters over SMS or Mobile Data Service which is used for all communication between the backend server and the terminal. The backend server sends a command to the terminal and then the terminal confirms with an acknowledgement message. If necessary, the terminal also sends report messages to the backend server.

The purpose of this document is to describe how to build up the backend server based on the Interface Protocol.

1.2.Terms and Abbreviations

Table 1: Terms and abbreviations

Abbreviation	Description
APN	Access Point Network
ASCII	American National Standard Code for Information Interchange
GPRS	General Packet Radio Service
GSM	Global System for Mobile Communications
HDOP	Horizontal Dilution of Precision
ICCID	Integrated Circuit Card Identity
IP	Internet Protocol
SMS	Short Message Service
TCP	Transmission Control Protocol
UDP	User Datagram Protocol
UTC	Coordinated Universal Time

2. System Architecture

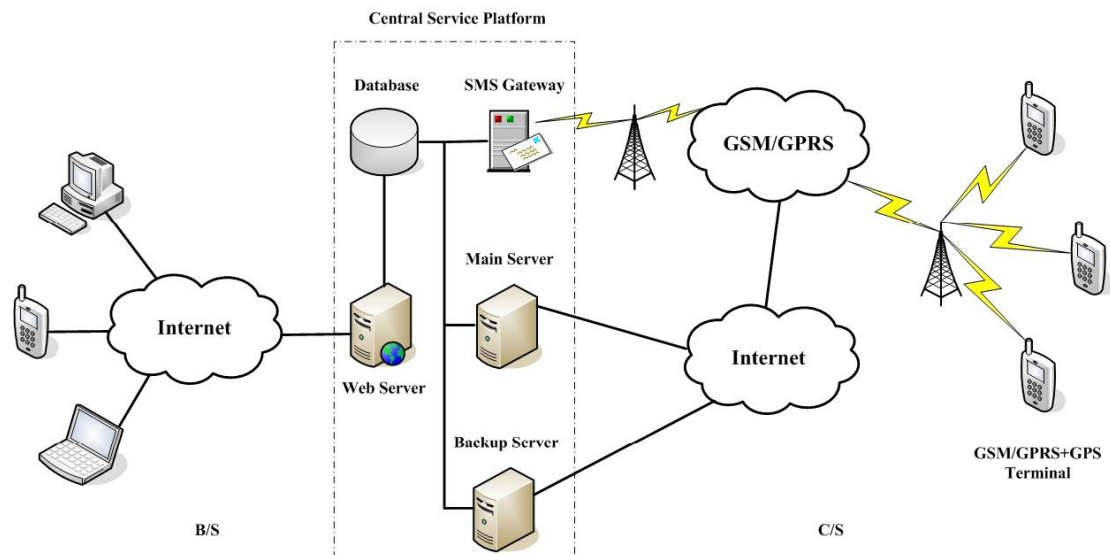


Figure 1: System architecture

The backend server can be accessed by many terminals and should have the following abilities:

- ✧ The backend server should be able to access the internet and listen to the connection originating from the terminal.
- ✧ The backend server should be able to support a TCP or UDP connection with the terminal. It should be able to receive data from the terminal and send data to the terminal.
- ✧ The backend server should be able to receive and send SMS.

3. Message Description

3.1. Message Format

All of the Interface Protocol messages are composed of printable ASCII characters. Each message has the following format:

Message format	Message type
AT+GTXXX =<parameter1>, <parameter2>...\$	Command
+ACK: GTXXX , <parameter1>, <parameter2>...\$	Acknowledgement
+BCK: GTXXX , <parameter1>, <parameter2>...\$	Buffer Acknowledgement
+RESP: GTXXX , <parameter1>, <parameter2>...\$	Report
+BUFF: GTXXX , <parameter1>, <parameter2>...\$	Buffer Report

The entire message string ends with character '\$'.

The characters 'XXX' identify the deferent message.

The "<parameter1>, <parameter2>..." carry the message's parameters. The number of parameters is different in different messages. The ASCII character ',' is used to separate the neighboring parameter characters. The parameter string may contain the ASCII characters:

'0'-'9', 'a'-'z', 'A'-'Z'.

Detailed descriptions of each message format are located in the specific message sections.

By sending Commands to the terminal, the backend server can either configure and query the parameters of the terminal or control the terminal to perform specific actions. When the terminal receives Commands over the air, it will reply with a corresponding Acknowledgement message. According to the configuration of the parameters, the terminal can send Report messages to the backend server. Please see the following figure:

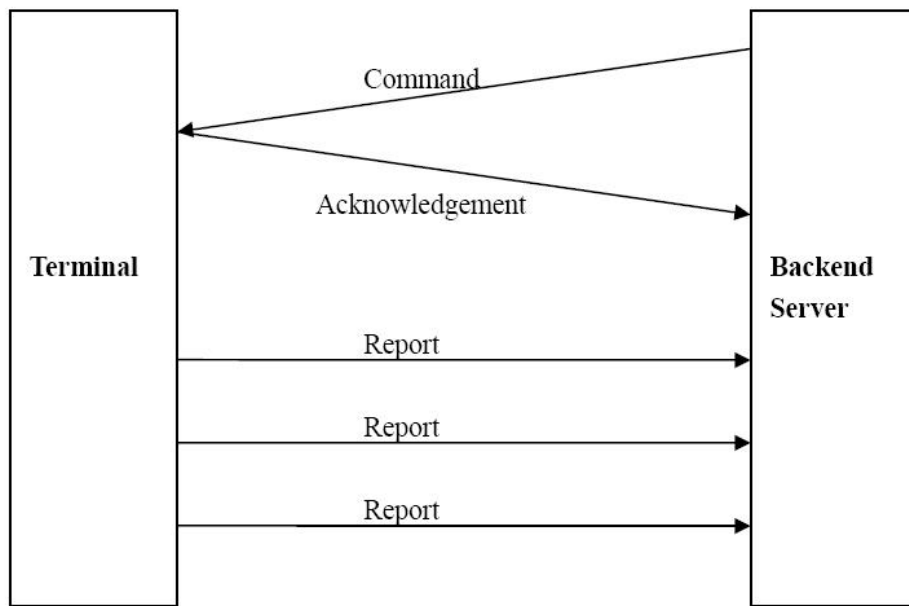


Figure 2: protocol messages flow Terminal Backend

When the device receives commands over the air, it supports several commands in one SMS or Mobile Data Service without separate symbol between two close commands. But it is necessary to make sure the total size of the several commands is not longer than 160 if the commands are sent via SMS. Here is an example to send three commands in one SMS.

AT+GTFRI=AIR11,1,1,,,0000,2359,300,2,150,3,001F,,,,,,,,,0007\$

AT+GTGEO=AIR11,0,3,101.412248,21.187891,1000,2,,,,,,,,,0008\$ AT+GTSPD=AIR11,1,5,40,30,60,,,,,,,,,,,,,0009\$

It includes three commands (**AT+GTFRI**, **AT+GTGEO** and **AT+GTSPD**) in the above message. And the terminal will handle the three commands one by one after it received the message via SMS and it will report the following three acknowledgement message to the backend server one by one.

+ACK: GTFRI, 110100, 358688000000158,, 0007, 20110101101854,0001\$

+ACK: GTGEO,110100, 358688000000158,,0,0008, 20110101101854,0002\$

+ACK: GTSPD,110100, 358688000000158,,0009, 20110101101854,0003\$

3.2. Command and Acknowledgement

3.2.1.Quick Start Setting

The command **AT+GTQSS** is used to set the Mobile Data Service parameter and backend server information in one command if all these settings are within 160 bytes, otherwise use **AT+GTBSI** and **AT+GTSRI** in two steps.

➤ **AT+GTQSS=**

Example: AT+GTQSS=AIR11,cmnet,,,4,0,1,116.226.44.17,9001,116.226.44.16,9002,+8613812341234,0,1,,,0001\$			
Parameter	Length (byte)	Range/Format	Default
Password	4 – 6	‘0’ – ‘9’, ‘a’ – ‘z’, ‘A’ – ‘Z’	AIR11
APN	<=40		
APN user name	<=20		
APN password	<=20		
Report mode	1	0 – 6	0
Reserved	0		
Buffer enable	1	0 1	1
Main server IP/domain Name	<=60		0.0.0.0
Main server port	<=5	0 – 65535	0
Backup server IP/domain Name	<=60		0.0.0.0
Backup server port	<=5	0 – 65535	0
SMS gateway	<=20		
Heartbeat interval	<=3	0 1 – 360 min	0
SACK enable	1	0 1	0
Connection Duration	<=3	1-255min	
Local port	<=5	0 – 65535	800
Enable Heartbeat after shutdown	1	0 1 2	0
Serial number	4	0000 – FFFF	
Tail character	1	\$	\$

- ✧ *<Password>*: The valid character of password is ‘0’-‘9’, ‘a’-‘z’, ‘A’-‘Z’. The default value is “AIR11”.
- ✧ *<APN>*: Access point name (APN).
- ✧ *<APN user name>*: the Mobile Data Service APN user name. If the parameter field is empty, the parameter will be cleared.
- ✧ *<APN password>*: the Mobile Data Service APN password. If the parameter field is empty,

the parameter will be cleared.

✧ *<Report mode>*: Supports report modes as following:

0: Stop reporting.

1: TCP short-connect preferred mode. The connection is based on TCP protocol. The terminal connects to the backend server every time it needs to send data and will shut down the connection when the terminal finishes sending data. And if it is failed to establish a TCP connection with the backend server (including Main Server and Backup Server), it will try to send data via SMS.

2: TCP short-connect forced mode. The connection is based on TCP protocol. The terminal connects to the backend server every time it needs to send data and will shut down the connection when the terminal finishes sending data. And if it is failed to establish a TCP connection with the backend server (including Main Server and Backup Server), it will be stored in the BUFFER (if BUFFER function is enabled, please refer to *<Buffer enable>*) or discarded (if the BUFFER function is disabled).

3: TCP long-connect mode. The connection is based on TCP protocol. The terminal connects to the backend server and maintains the connection using the heart beat data. Please note that in this mode the backend server should respond to the heart beat data from the terminals.

4: UDP mode. The terminal will send data to the backend server by UDP protocol. It supports to receive protocol command via UDP. But it is recommended to make sure the IP address and UDP port of the device can be visited in the internet, and this is generally realized by heart beat package and the message **+RESP:GTPDP**.

5: Force on SMS. Only use the SMS for transmitting.

6: UDP long-connect mode. The terminal will send data to the backend server by UDP protocol. It supports to receive protocol command via UDP. The terminal will close the connection after *< Connection Duration >* if no data transmission.

✧ *<Buffer enable>*: Enable or disable BUFFER function. Please refer to **3.3.6** for the details about BUFFER function.

0 Disable the BUFFER function.

1 Enable the BUFFER function.

✧ *<Main server IP/domain name>*: The IP address or the domain name of the main server.

✧ *<Main server port>*: The port of the main server.

✧ *<Backup server IP/domain name >*: The IP address or the domain name of the backup backend server.

✧ *<Backup server port>*: The port of the backup server.

✧ *<SMS gateway>*: Maximum 20 characters including the optional national code starting with “+” for SMS messages. Short code (for example: 10086) is also supported.

✧ *<Enable Heartbeat after shutdown>*: Control whether the heartbeat is turned on after the shutdown

0:Do not perform heartbeat boot after shutdown.

1:Perform heartbeat boot after shutdown.(Except for button shutdown, reset)

2:Perform heartbeat boot after shutdown.(Except for reset)

✧ *<Heartbeat interval>*: the interval for the terminal to send heartbeat package message to the

backend server. If set to 0, no heartbeat package is sent.

If this function is enabled and the device is power off, and <Enable Heartbeat after shutdown> is set 1, the device will power on and send heartbeat package according to the heartbeat interval.

If the device power on because sending heartbeat package:

1. It only send heartbeat package.

2. If the heartbeat interval is not more than five minutes. If the device send heartbeat package but the server do not reply a heartbeat message to the device, the device will send message twice as per the interval of 30 seconds. The third time the device will send message once as per the interval of heartbeat interval. This process is cyclical.

If the device receive the reply from server, the device will send message as per the interval of heartbeat interval.

3. If the heartbeat interval is more than five minutes, the device will power off when the device receive the reply for a heartbeat message (or the device send heartbeat package twice as per the interval of 30 seconds but do not receive the reply).

4. If the device receive some command or a button event has occurred, the device will power off and power on properly.

If the device always on:

1. If the device send heartbeat package but the server do not reply a heartbeat message to the device, the device will send message twice as per the interval of 120 seconds. The third time the device will send message once as per the interval of heartbeat interval. This process is cyclical.

2. If the device receive the reply from server, the device will send message as per the interval of heartbeat interval.

✧ <SACK enable>: A numeric to indicate whether the backend server should reply SACK message to the device.

0: the backend server does not reply SACK message after receiving a message from the device.

1: the backend server should reply SACK message after receiving a message from the device.

[USER INSTRUCTION]

Buffer, SACK and heartbeat all are the mechanism to enhance the robust of the connection between tracker and your backend server.

1. *Buffer provides the most primary level of message robust.*

Tracker will buffer all the messages while it detects no Mobile Data

Service connection available. And it will send out the buffered messages after the Mobile Data

Service connection resumed. The buffer size of ATW

is 720 pcs which is a FIFO queue, and the oldest message will be overwritten by the latest one if the buffer overflowed.

Advantage: No resource needed from the backend server side. This is only take cared by the device itself.

Shortage: Cannot guarantee the message arrival to the backend server while Mobile Data Service connection is available but server not reachable, such as server down, internet connect broken, etc.

2. SACK provides the second level of message robust with a middle level overhead.

The device will wait for the SACK message from server before it remove the current message from its message queue and send next message. If no SACK received, the device will try to resend the message to the server till it gets the SACK.

Advantage: It can guarantee the message arrival to backend server. It can work very well with UDP mode to provide a robust message connection.

Shortage:

- a. Need server to send back a SACK message to each message from the device, which means extra communication cost.
- b. The server availability detection is based on the message report from device. So it not works well for TCP/IP long connection mode while the message report interval is long while need to maintain the connection availability. For example, if the device is set to report position every 4 hours with TCP/IP long connection mode, the TCP/IP connection may not functional during this 4 hours period for many reasons.

3. Heartbeat provides the highest level of message robust with high level overhead.

The device will keep send heartbeat message to hand shake with the backend server as per the interval defined in the "Heartbeat Interval".

This is normally work with the TCP/IP long connection mode. The server should reply a heartbeat message to the device while it received one. If the device not received heartbeat message for 3 times, it will try to re-establish the TCP connection with server and re-send the messages.

Advantage: Heartbeat can maintain the highest connection availability for TCP/IP connection.

Shortage: Heavy overhead.

As a conclusion, these 3 mechanism can be enabled together without any conflict with each other. We recommended to enable buffer at least. SACK can work very well with UDP mode. And Heartbeat is a MUST if you're using TCP/IP long connection, but not so efficient for UDP mode.

- ✧ *<Connection Duration>*: Unit minutes.
- ✧ *<Local port>*: An integer, specifying the local sending and receiving port.
- ✧ *<Serial number>*: the serial number for the command. It will be invoked in the ACK message of the command.
- ✧ *<Tail character>*: a character to indicate the end of the command. And it should be "\$".

The acknowledgement message of AT+GTQSS command:

➤ **+ACK:GTQSS**

Example:

+ACK:GTQSS,110100, 358688000000158,,0001, 20110101101854,0001\$

Parameter	Length (byte)	Range/Format	Default
-----------	---------------	--------------	---------

Firmware Version	6	XX0000 – XXFFFF, X ∈ {'A'-'Z','0'-'9'}	
Unique ID	15	IMEI	
Device name	10		
Serial number	4	0000 – FFFF	
Send time	14	YYYYMMDDHHMMSS	
Count number	4	0000 – FFFF	
Tail character	1	\$	\$

- *<Firmware Version>*: The six characters are Firmware version number in hexadecimal. For example, '423034' means version B04.
- *<Unique ID>*: ID of the device, use the IMEI of the current SIM card inside the terminal.
- *<Device name>*: Please refer to the parameter *<Device name>* in the command **AT+GTCFG**.
- *<Serial number>*: The same serial number which is sent to the device with the corresponding command. The backend server could use it to distinguish which command the ACK message is for.
- *<Send time>*: The local time to send the ACK message.
- *<Count number>*: The self-increasing count number will be put into every acknowledgment message and report message. The count is beginning from 0000 and increases by 1 every time. It will roll back after "FFFF".

3.2.2. Bearer Setting Information

The command **AT+GTBSI** is used to set the Mobile Data Service parameter.

➤ **AT+GTBSI=**

Example: AT+GTBSI= AIR11,cmnet,,,,,,,,,0002\$			
Parameter	Length (byte)	Range/Format	Default
Password	4 – 6	‘0’ – ‘9’, ‘a’ – ‘z’, ‘A’ – ‘Z’	AIR11
APN	<=40		
APN user name	<=20		
APN password	<=20		
Reserved	0		
Reserved	0		
Reserved	0		
Network Mode	1	0-3	
Serial number	4	0000 – FFFF	
Tail character	1	\$	\$

✧ *<Network mode>*: It specifies the mobile network mode the device uses.

- 0:** WCDMA first
- 1:** GSM only
- 2:** WCDMA only
- 3:** GSM first

The acknowledgement message of **AT+GTBSI** command:

➤ **+ACK:GTBSI**

Example: +ACK:GTBSI,110100, 358688000000158,,0002, 20110101101854,0002\$			
Parameter	Length (byte)	Range/Format	Default
Firmware Version	6	XX0000 – XXFFFF, $X \in \{'A'-'Z', '0'-'9'\}$	
Unique ID	15	IMEI	
Device name	10		
Serial number	4	0000 – FFFF	
Send time	14	YYYYMMDDHHMMSS	
Count number	4	0000 – FFFF	
Tail character	1	\$	\$

3.2.3. Backend Server Register Information

The command **AT+GTSRI** is used to configure the backend server information that the terminal reports to and the report mode that defines the communication method between the backend server and the terminal.

➤ **AT+GTSRI=**

Example: AT+GTSRI= AIR11,4,,1,116.226.44.17,9001,116.226.44.16,9002,+8613812341234,0,1,,,,,0003\$			
Parameter	Length (byte)	Range/Format	Default
Password	4 – 6	‘0’ – ‘9’, ‘a’ – ‘z’, ‘A’ – ‘Z’	AIR11
Report mode	1	0 – 5	0
Reserved	0		
Buffer enable	1	0 1	1
Main server IP/domain Name	<=60		0.0.0.0
Main server port	<=5	0 – 65535	0
Backup server IP /domain Name	<=60		0.0.0.0
Backup server port	<=5	0 – 65535	0
SMS gateway	<=20		
Heartbeat interval	<=3	0 1 – 360 min	0
SACK enable	1	0 1	0
Connection Duration	<=3	1-255 min	
Local port	<=5	0 – 65535	800
Reserved	0		
Reserved	0		
Serial number	4	0000 – FFFF	
Tail character	1	\$	\$

The acknowledgement message of **AT+GTSRI** command:

➤ **+ACK: GTSRI**

Example: +ACK:GTSRI,110100,358688000000158,,0003,20110101101854,0003\$			
Parameter	Length (byte)	Range/Format	Default
Firmware Version	6	XX0000 – XXXFFF, X ∈ {'A'-'Z','0'-'9'}	
Unique ID	15	IMEI	
Device name	10		
Serial number	4	0000 – FFFF	
Send time	14	YYYYMMDDHHMMSS	
Count number	4	0000 – FFFF	
Tail character	1	\$	\$

3.2.4. Global Configuration

The AT+GTCFG command is used to configure the global parameters.

➤ AT+GTCFG=

Example: AT+GTCFG= AIR11,123456,AIR2012,,,1,5,003F,,,0FFF,0,1,1,300,1,,,,,0004\$			
Parameter	Length (byte)	Range/Format	Default
Password	4 – 6	'0' – '9', 'a' – 'z', 'A' – 'Z'	AIR11
New password	4 – 6	'0' – '9', 'a' – 'z', 'A' – 'Z'	NULL
Device name	10	'0' – '9', 'a' – 'z', 'A' – 'Z'	PRIME1
Reserved	0		
Reserved	0		
GPS on need	3	0 1	1
GPS fix delay	1	1 – 20 mins	1
Report items mask	<=4	0000 – FFFF	001F
Report encryption key	2	00-FF	00
Power down delay	<=2	1-60 seconds	60
Event mask	4	0000-FFFF	0EFF
Reserved	0		
LED mask	<=2	0-FF	1
Info report enable	1	0 1	1
Info report interval	<=5	30 – 86400 seconds	300
MT call mode (Location by call)	1	0 1	1
Vibrate Mask	1	0-F	3
GEO Interval	<=5	0 – 86400 seconds	0
Reserved	0		
Reserved	0		
Reserved	0		
Serial number	4	0000 – FFFF	
Tail character	1	\$	\$

- <New password>: Set to change the current password. If user wants to keep the current password, set NULL as default.
- <Device name>: the name of the device, which appears in each uplink message.
- <GPS on need>: Whether to close GPS chip after retrieving GPS position information.
 - 0: Never close GPS chip
 - 1: Close GPS chip after retrieving GPS information every time.
- <GPS fix delay>: The longest positioning time. Unit: min.
- <Report items mask>: Bitwise report mask to configure the composition of the entire uplink message. Each bit represents a field in the uplink message. If some bit is set as 1, the corresponding field will be filled if it is included in the uplink message. Otherwise, the field

will be empty.

Bit0 (0001) : *<speed>*

Bit1 (0002) : *<azimuth>*

Bit2 (0004) : *<altitude>*

Bit3 (0008): GSM LAI and CI, including *<MCC>*, *<MNC>*, *<LAC>*, *<cell id>* and the *<reserved1>* parameter "00"

Bit4 (0010) : *<send time>*

Bit5 (0020) : *<Device name>*

Bit6 (0040) : *<Google link old style>*

Bit7 (0080) : *<GTNMR for free fall>*

Bit8 (0100) : *<HDOP as GPS accuracy>*

Bit9 (0200) : *<NMD GPS Info>* When the device detects non-movement, The speed from GPS is set to 0.0.

Bit10 (0400) : *<UART Always On>*

Bit11 (0800) : *<Report Encryption >*

Bit12 (1000) : *<Same coordinate in NMD>* the same GPS coordinate will be reported when the device is still.

Bit13 (2000) : *<temperature information>* the current temperature information.

- *<Event mask>*: A Hex value to configure which event reports can be sent to the backend server: Each bit corresponds to a report message. And if the bit is set as 1, the corresponding report message can be sent to the backend server. Otherwise, it can not be sent to the backend server. Here is the mapping between each bit and each report message.

Bit0 (0001): **+RESP: GTPNA**

Bit1 (0002): **+RESP: GTPFA**

Bit2 (0004): **+RESP: GTEPN**

Bit3 (0008): **+RESP: GTEPF**

Bit4 (0010): **Reserved**

Bit5 (0020): **+RESP: GTBPL**

Bit6 (0040): **+RESP: GTBTC**

Bit7 (0080): **+RESP: GTSTC**

Bit8 (0100): **+RESP: GTSTT**

Bit9 (0200): **Reserved**

Bit10 (0400): **+RESP: GTPDP**

Bit11 (0800): **+RESP: GTPNL**

Bit12 (0800): **+RESP: GTHIS**

- *<LED mask>*: A Hex value to configure the working mode of LED.

Bit0:

0: Each time configure GTFRI for the device, GPS LED will work for 30 seconds and then are turned off deadly.

1: Turn on GPS LED if necessary.

Bit1:Reserved.

Bit2:

0: None function

- 1:** Power LED do fast flash when power is low
 - Bit3:**
 - 0:** None function
 - 1:** GSM LED dark when no SIM is present
 - Bit4:** Reserved.
 - Bit5:**
 - 0:** None function
 - 1:** Turn off all LEDs except charging LED.
 - Bit6:** Reserved.
 - Bit7:** Reserved.
- *<Info report enable>*: Enable/disable the device information report (**+RESP:GTINF**) function. The device information include state of the device, ICCID, GSM signal strength, adapter connection status, battery voltage, charging status, Power and GPS LED working mode, GPS on need setting, GPS antenna type, GPS antenna status, the last known time of GPS fix.
 - 0:** Disable the device information report function.
 - 1:** Enable the device information report function.
 - *<Info report interval>*: The interval of reporting the device information.
 - *<MT call mode (Location by call) >*: Configure how to handle the incoming call.
 - 0:** Just hang up the call.
 - 1:** Location by call. Hang up the call and report the current position.
 - *<Vibrate Mask>*: A Hex value to configure the working mode of vibrator.
 - Bit0:** Power on/off
 - 0:** None function.
 - 1:** Vibrate when the device powers on/off.
 - Bit1:** SOS Button
 - 0:** None function
 - 1:** Vibrate when press SOS button.
 - Bit2:** Reserved.
 - Bit3:** Low battery
 - 0:** None function
 - 1:** Vibrate once when low battery.
 - *<Power down delay>*: The device will send data to the server after user presses power key for more than 3 seconds to power off the terminal. The power delay time is the maximum time to complete data transmission. After which the terminal will be shut down completely. Unit: second.
 - *<Report encryption key>*: If **Bit11** (0800) : *<Report Encryption >* is 1, the report encryption is using the exclusive or operation. The encryption will begin after IMEI:
 +RESP:GTINF,210102,354524043181354.....r....u.....
 - *<GEO Interval>*: The interval of checking Geo-fence.

The acknowledgement message of **AT+GTCFG** command:

➤ **+ACK:GTCFG**

Example:			
+ACK:GTCFG,110100,358688000000158,AIR2012,0004,20110101101854,0004\$			
Parameter	Length (byte)	Range/Format	Default
Firmware Version	6	XX0000 – XXXFFF, X ∈ {'A'-'Z','0'-'9'}	
Unique ID	15	IMEI	
Device name	10		
Serial number	4	0000 – FFFF	
Send time	14	YYYYMMDDHHMMSS	
Count number	4	0000 – FFFF	
Tail character	1	\$	\$

3.2.5. Non movement detection

The **AT+GTNMD** command is used to configure the parameters for non movement detection.

➤ **AT+GTNMD=**

Example: AT+GTNMD= AIR11,2,20,3,2,1200,3,0,,,,,,0005\$			
Parameter	Length (byte)	Range/Format	Default
Password	4 – 6	‘0’ – ‘9’, ‘a’ – ‘z’, ‘A’ – ‘Z’	AIR11
Mode	1	0-F	0
Non-movement duration	<=3	1 – 255(×5seconds)	6
Movement duration	<=2	1 – 10(×128ms)	2
Movement threshold	1	1-10	3
rest fix interval	<=5	10 – 86400 seconds	1200
rest send interval	2	1 -15	3
Battery level	1	0 1	0
Detection delay	5	0-86400 senconds	0
Reserved	0		
Reserved	0		
Reserved	0		
Reserved	0		
Reserved	0		
Serial number	4	0000 – FFFF	
Tail character	1	\$	\$

- ✧ **<mode>**: A hex numeric to determine how the function works. Each bit of the hex numeric indicate different behavior that device could do. If the corresponding bit is 1, the device will behave as the description. Otherwise, it won't behave as the description.

Bit0(1): Suspend the report of WIFI,FRI and Geo-Fence when it detects non-movement.

Bit1(2): Report the message **+RESP:GTNMR** to the backend server when it detects non-movement.

Bit2(4): Report the message **+RESP:GTNMR** to the backend server when it detects movement.

Bit3(8): Change the fix interval and send interval of GTFRI and GTWIF to *<rest fix interval>* and *<rest send interval>* when it detects non-movement. In the case, It just modify the fix interval and send interval of GTFRI and GTWIF but not suspend the report of GTFRI and GTWIF even if Bit0 is 1.

- ✧ **<Non-movement duration>**: A time parameter to determine whether the device enters non-movement status, i.e. if the motion sensor detects that the device keeps in non-movement for a period of time defined by *<Non-movement duration>*, the device will be considered as in non-movement status.
- ✧ **<Movement duration>**: A time parameter to determine whether the device enters movement

status. If the motion sensor detects that the device keeps in movement for a period of time defined by *<Movement duration>*, the device will be considered as in movement status.

- ✧ *<Movement threshold>*: The threshold for the motion sensor to determine whether the device is in movement status. The less, the more likely to be treated as movement.
- ✧ *<rest fix interval>*: the fix interval for the report of GTFRI and GTWIF when the device is in rest state if Bit3 of *<mode>* is 1.
- ✧ *<rest send interval>*: the send interval for the report of GTFRI and GTWIF when the device is in rest state if Bit3 of *<mode>* is 1.
- ✧ *<battery level>*: if Bit0 of *<mode>* is 1, report battery level or not.

0: Don't report battery level.

1: Suspend the report of FRI and Geo-Fence when it detects non-movement. Report the battery level (BAT) instead.

- ✧ *<Detection delay>*: The delay of motion detection. The device will delay xxx seconds before it judge a movement after it detected any movement. If the movement keep going after the delay, device will judge it as a 'real' movement and enter motion mode. Otherwise device will ignore the movement and keep in sleep mode. This is to prevent device from being frequently waken by occasional vibration in order to save battery life. This parameter can be used along with motion threshold, where one can set a sensitive motion detection threshold as well as ignoring nonsense movements.

NOTE: *<rest send interval>* is the times of *<rest fix interval>*, so the actual rest send interval time is equal to *<rest send interval>* multiplied by *<rest fix interval>*.

The acknowledgement message of **AT+GTNMD** command:

➤ **+ACK:GTNMD**

Example: +ACK:GTNMD,110100,358688000000158,,0005,20110101101854,0005\$			
Parameter	Length (byte)	Range/Format	Default
Firmware Version	6	XX0000 – XXXFFF, X ∈ {'A'-'Z','0'-'9'}	
Unique ID	15	IMEI	
Device name	10		
Serial number	4	0000 – FFFF	
Send time	14	YYYYMMDDHHMMSS	
Count number	4	0000 – FFFF	
Tail character	1	\$	\$

3.2.6. Time Adjustment

The command **AT+GTTMA** is used to adjust local time. If the GPS fixing is successful, the local time will be automatically adjusted according to the GPS UTC time.

➤ **AT+GTTMA=**

Example: AT+GTTMA= AIR11,+,3,30,0, 20110101000000,,,,,0006\$			
Parameter	Length (byte)	Range/Format	Default
Password	4 – 6	'0' – '9', 'a' – 'z', 'A' – 'Z'	AIR11
Sign	1	+ -	+
Hour Offset	<=2	0 - 23	00
Minute Offset	<=2	0 - 59	00
Daylight Saving	1	0 1	0
UTC Time	14	YYYYMMDDHHMMSS	
Reserved	0		
Reserved	0		
Reserved	0		
Reserved	0		
Serial number	4	0000 – FFFF	
Tail character	1	\$	\$

- ✧ <Sign>: Indicate the positive or negative of the local time offset to UTC
- ✧ <Hour Offset>: UTC offset in hours
- ✧ <Minute Offset>: UTC offset in minutes
- ✧ <Daylight Saving>: Enable/disable daylight saving time.
 - 0**: Disable daylight saving
 - 1**: Enable daylight saving
- ✧ <UTC time>: The configuration UTC time.

The acknowledgement message of **AT+GTTMA** command:

➤ **+ACK:GTTMA**

Example: +ACK:GTTMA,110100, 358688000000158,,0006, 20110101101854,0006\$			
Parameter	Length (byte)	Range/Format	Default
Firmware Version	6	XX0000 – XXFFFF, X ∈ {'A'-'Z','0'-'9'}	
Unique ID	15	IMEI	
Device name	10		
Serial number	4	0000 – FFFF	
Send time	14	YYYYMMDDHHMMSS	
Count number	4	0000 – FFFF	
Tail character	1	\$	\$

3.2.7. Fixed Report Information

The command **AT+GTFRI** is used to configure the parameters of scheduled report.

➤ **AT+GTFRI=**

Example: AT+GTFRI= AIR11,1,1,,,0000,2359,300,2,150,3,001F,1000,1000,,,,,0,,0007\$			
Parameter	Length (byte)	Range/Format	Default
Password	4 – 6	‘0’ – ‘9’, ‘a’ – ‘z’, ‘A’ – ‘Z’	AIR11
Mode	1	0 1 2 3 4	0
Discard no fix	1	0-1	0
Reserved	0		
Reserved	0		
Begin time	4	HHMM	0000
End time	4	HHMM	0000
Check interval1	<=5	3 – 86400 seconds	50
Send interval1	<=5	1 – 15/15000	1
Reserved	0		
Reserved	0		
Report mask	<=4	0000-FFFF	001F
Distance	<=5	50 – 65535 m	1000
Mileage	<=5	50 – 65535 m	1000
Reserved	0		
Reserved	0		
Reserved	0		
Reserved	0		
Location Mode	1	0-2	
Reserved	0		
Serial number	4	0000 – FFFF	
Tail character	1	\$	\$

✧ *<Mode>*:

0: Disable fixed report function.

1: Enable the scheduled timing report.

2: Enable the scheduled distance report. Report each time the straight length that the device moved has exceeded the specified distance. It ignores the detail path the device has passed along. This function is invalid unless the GPS chip opens always. Unit: Meter.

3: Enable the scheduled mileage report. Report each time the path length that the device moved has exceeded the specified length. It calculates the length of the detail path the device has passed along. This function is invalid unless the GPS chip opens always. Unit: Meter.

4: Enable the scheduled time multi-points report.

- ✧ *<Discard no fix>*:
 - 0**: to report last known GPS position if there is no GPS fix,
 - 1**: to send nothing if there is no GPS fix.
- ✧ *<Begin time>*: The start time of scheduled fixed report. The valid format is “HHMM”. The value range of “HH” is “00”-“23”. The value range of “MM” is “00”-“59”. It is noticed to use UTC time here.
- ✧ *<End time>*: The end time of scheduled fixed report. The valid format and range are same as *<Begin time>*.
- ✧ *<Check interval>*: The interval time to fix GPS, its value range is 3-86400 and the unit is second.
- ✧ *<Send interval>*: The period to send the position information . (When mode == 6,the range is from 1 to 15000,or else,the range is from 1 to 15.)

NOTE: *< Send interval>* is the times of *< Check interval>*, so the actual *Send interval* time is equal to *< Send interval>* multiplied by *< Check interval>*.
- ✧ *<Report mask>*: Bitwise report mask to configure the composition of GPS position information for fixed report. If some bit is set as 1, the corresponding field will be filled in the position related message. Otherwise, the field will be empty.
 - Bit0 (0001) :** *<speed>*
 - Bit1 (0002) :** *<azimuth>*
 - Bit2 (0004) :** *<altitude>*
 - Bit3 (0008):** GSM LAI and CI, including *<MCC>*, *<MNC>*, *<LAC>*, *<cell id>* and the *<reserved1>* parameter “00”
 - Bit4 (0010) :** *<send time>*
- ✧ *<Distance>*: the specified distance to send the position information when *<mode>* is 2 and this is valid only in the case that GPS chip keep opened always. Unit: meter.
- ✧ *<Mileage>*:the specified path length to send the position information when *<mode>* is 3 and this is valid only in the case that GPS chip keep opened always. Unit: meter.
- ✧ *<Location Mode>*:(when Location mode is set to 0, support FRI mode 1~4, when Location mode is set to 1 or 2, only support FRI mode 1)
 - 0**: to report last known GPS position if there is no GPS fix.
 - 1**: to report WiFi and LBS information if there is no GPS fix.
 - 2**: to report WiFi and LBS information and not to open GPS.

Note:

- **Check and send interval:** If *<GPS on Need>* was set as 1, the terminal has two modes to operate the GPS module according to the value of *<Check interval>*.
- If the *<Check interval>* is more than 60 seconds, the terminal will close the GPS part every time after GPS fixing finishes in order to save power.

Due to the maximum length limitation of the report message, it must be assured that: *<Send interval>* / *<Check Interval>* <=15. If exceed that limitation, the command is discarded and the previous settings keep untouched.

If the terminal is in “Force on SMS Mode” (*<Report mode>* = 5) while the *<Send interval>* / *<Check Interval>* > 1, the terminal will report only the last position in the fixed timing report, because only one position could be filled in one single SMS message (160 bytes at most).

Action time range:

- *<Begin time> <<End time>*: reports in the time period (begin time, end time) every day.
- *<Begin time> > <End time>*: reports starting from *<Begin time>* and stopping at *<End time>* on the following day.
- *<Begin time> =<End time>*: reports on the whole day.

Note:

When it detects non-movement, open the GPS chip, report the message **+RESP:GTFRI** to the backend server. This report, like the normal report, is affected by other configuration parameters. For example: when the mode is set to 0, this report will not be sent.

The acknowledgement message of **AT+GTFRI** command:

➤ **+ACK:GTFRI**

Example: +ACK:GTFRI,110100,358688000000158,,0007,20110101101854,0007\$			
Parameter	Length (byte)	Range/Format	Default
Firmware Version	6	XX0000 – XXXFFF, X ∈ {'A'-'Z','0'-'9'}	
Unique ID	15	IMEI	
Device name	10		
Serial number	4	0000 – FFFF	
Send time	14	YYYYMMDDHHMMSS	
Count number	4	0000 – FFFF	
Tail character	1	\$	\$

3.2.8. Geo-Fence Information

The command **AT+GTGEO** is used to configure the parameters of Geo-Fence. Geo-Fence is a virtual perimeter on a geographic area using a location-based service, so that when the geofencing terminal enters or exits the area a notification is generated. The notification can contain information about the location of the terminal and maybe sent to the backend server.

➤ **AT+GTGEO=**

Example: AT+GTGEO= AIR11,0,3,101.412248,21.187891,1000,2,,,,,,,,,0008\$			
Parameter	Length (byte)	Range/Format	Default
Password	4 – 6	‘0’ – ‘9’, ‘a’ – ‘z’, ‘A’ – ‘Z’	AIR11
GEO ID	1	0-4	
Mode	1	0-3	0
Longitude	<=11	(-)xxx.xxxxxx	999.9
Latitude	<=10	(-)xx.xxxxxx	99.9
Radius	<=7	50 – 6000000m	1000
Check interval	<=2	1 - 24	2
Periodic Report	1	0-1	1
Reserved	0		
Reserved	0		
Reserved	0		
Reserved	0		
Reserved	0		
Reserved	0		
Reserved	0		
Serial number	4	0000 – FFFF	
Tail character	1	\$	\$

- ✧ **<GEO ID>**: A numeric to identify the Geo-Fence.
 - ✧ **<Mode>**: A numeric which indicates when to report the notification to the backend server based on the following:
 - 0**: Disable the Geo-Fence on the specified GEO ID.
 - 1**: Reports when enters the Geo-Fence.
 - 2**: Reports when leaves the Geo-Fence.
 - 3**: Reports when enters or leaves the Geo-Fence.
 - ✧ **<Longitude>**: The longitude of a point which is defined as the center of the Geo-Fence circular region. The format is “(-)xxx.xxxxxx” and the value range is from “-180.000000” to “180.000000”. The unit is degree. West longitude is defined as negative starting with minus “-” and east longitude is defined as positive without “+”.
- The default value is an invalid digital: 999.9 if there is no correct setting.**
- ✧ **<Latitude>**: The latitude of a point which is defined as the centre of the Geo-Fence circular region. The format is “(-)xx.xxxxxx” and the value range is from “-90.000000”

to“90.000000”.The unit is degree. South Latitude is defined as negative starting with minus “-” and north Latitude is defined as positive without “+”.

The default value is an invalid digital: 99.9 if there is no correct setting.

- ✧ <Radius>: The radius of the Geo-Fence circular region. The value range is (50-6000000) and the unit is meter.
- ✧ <Check interval>: The interval of GPS checking for the Geo-Fence alarm.
- ✧ **NOTE:** If <GEO Interval> is not equal to zero, the actual *Check interval* time is equal to <check interval> multiplied by < GEO Interval >. If <GEO Interval> is equal to zero, the actual *Check interval* time is equal to <check interval> multiplied by one of the parameters among the <rest fix interval> in **GTNMD**, <Check interval> in **GTFRI**.
- ✧ <Periodic Report>: Whether to open the continuous **+RESP:GTGEO** report.
 - 0:** When enters or leaves the Geo-Fence, Send only one **+RESP:GTGEO** report.
 - 1:** When enters or leaves the Geo-Fence, according to the < Check interval > send **+RESP:GTGEO** periodic report.

Note:

<Mode> will be restored at first and it could be used later when switch on Geo-Fence 0 via Function Key), because the terminal doesn't know when to check Geo-Fence if the parameter <Check interval> is 0.

The acknowledgement message of **AT+GTGEO** command:

➤ **+ACK:GTGEO**

Example: +ACK:GTGEO,110100,358688000000158,,0,0008,20110101101854,0008\$			
Parameter	Length (byte)	Range/Format	Default
Firmware Version	6	XX0000 – XXFFFF, X ∈ {'A'-'Z','0'-'9'}	
Unique ID	15	IMEI	
Device name	10		
GEO ID	1	0-4	
Serial number	4	0000 – FFFF	
Send time	14	YYYYMMDDHHMMSS	
Count number	4	0000 – FFFF	
Tail character	1	\$	\$

3.2.9. Speed Alarm

The **AT+GTSPD** command is used to configure speed alarm of the device. Based on the working mode set, the device will report speed alarm when its speed is outside or inside of a predefined range.

➤ **AT+GTSPD=**

Example:			
AT+GTSPD= AIR11,1,5,40,30,60,,,,,,,,,,,,,0009\$			
AT+GTSPD= AIR11,2,0,80,30,60,,,,,,,,,,,,,0009\$			
Parameter	Length (byte)	Range/Format	Default
Password	4 – 6	‘0’ – ‘9’, ‘a’ – ‘z’, ‘A’ – ‘Z’	AIR11
Mode	1	0-3	0
Min speed	<=3	0 – 400km/h	0
Max speed	<=3	0 – 400km/h	0
Duration	<=4	5 – 3600sec	60
Send interval	<=4	30 – 3600sec	300
Reserved	0		
Reserved	0		
Reserved	0		
Reserved	0		
Reserved	0		
Reserved	0		
Reserved	0		
Reserved	0		
Reserved	0		
Reserved	0		
Reserved	0		
Reserved	0		
Reserved	0		
Reserved	0		
Reserved	0		
Reserved	0		
Serial number	4	0000 – FFFF	
Tail character	1	\$	\$

✧ *<Mode>*: A numeric to indicate the working mode of speed alarm.

0: Disable speed alarm.

1: Enable speed alarm. If the current speed is within the speed range defined by min speed and max speed, a speed alarm is sent. GPS must be always on.

2: Enable speed alarm. If the current speed is outside the speed range defined by min speed and max speed, a speed alarm is sent. GPS must be always on.

3: Enable speed alarm. One alert for each over max speed. GPS must be always on.

✧ *<Min speed>*: The lower limit of the speed range.

- ✧ *<Max speed>*: The upper limit of the speed range.
- ✧ *<Duration>*: According to the working mode, if the speed satisfies the specified speed range and maintains a period of time defined by *<Duration>*, the speed alarm will be triggered.
- ✧ *<Send interval>*: After the speed alarm is triggered, the speed alarm message is sent every interval time.

The acknowledgement message of **AT+GTSPD** command:

➤ **+ACK:GTSPD**

Example:			
+ACK:GTSPD,110100,358688000000158,,0009,20110101101854,0009\$			
Parameter	Length (byte)	Range/Format	Default
Firmware Version	6	XX0000 – XXXFFF, X ∈ {'A'-'Z','0'-'9'}	
Unique ID	15	IMEI	
Device name	10		
Serial number	4	0000 – FFFF	
Send time	14	YYYYMMDDHHMMSS	
Count number	4	0000 – FFFF	
Tail character	1	\$	\$

3.2.10. Function Key Setting

The **AT+GTFKS** command is used to configure the function of the power key and the function key.

➤ **AT+GTFKS=**

Example: AT+GTFKS= AIR11,1,1,,,,,000A\$			
Parameter	Length (byte)	Range/Format	Default
Password	4 – 6	'0' – '9', 'a' – 'z', 'A' – 'Z'	AIR11
Power key enable	1	0 1	1
Full power up whilst charging	1	0 1	1
Function key mode	<=2	0-4 12	0
Reserved	0		
Reserved	0		
SOS report interval	2-4	30-1440	
Reserved	0		
Serial number	4	0000 – FFFF	
Tail character	1	\$	\$

- ✧ *<Power key enable>*: A numeric to indicate the working mode of the power key.
 - 0**: Press power key will not power down the device.
 - 1**: Press power key will power down the device.
- ✧ *<Full power up whilst charging>*: When device powers off
 - 0**: Device doesn't power on when it detects charging in.
 - 1**: Device powers on when it detects charging in.
- ✧ *<Function key mode>*: The working mode for the function key operation..
 - 0: Ignore the function key operation.**
 - 1: Geo-Fence mode.** Switch on/off the Geo-Fence ID 0 when the function key is long pressed. And after long press the function key, the terminal will report the message **+RESP: GTSWG** to inform to switch on or off Geo-Fence ID0 via this operation.
 - 2: Geo-Fence in current position.** Switch on/off the Geo-Fence 0 when the function key is long pressed and use the current position as the centre of Geo-Fence 0 when switch on the Geo Fence 0 via the function key. After long press the function key, the terminal will report the message **+RESP: GTSWG** immediately. And if this operation is expected to switch on Geo-Fence ID 0, the terminal will start GPS fixing to get the current position as the centre of Geo-Fence ID 0. After GPS fixing finishes, it will report the message **+RESP: GTGCR** to inform the result of GPS fixing and whether Geo-Fence ID 0 was switched on successfully.
 - NOTE:** the last valid position will be used as the centre of GEO-Fence 0 if the GPS fixing failed.
 - 3: SOS mode.** After long press for 3 seconds, the device will report the current position

according to the result of the latest GPS fixing and then start GPS fixing. After the GPS fixing finishes or timeout, the device will report the SOS message according the result of the GPS fixing.

4. SOS-once mode. After long press for 3 seconds, the device will report the current position according to the result of the latest GPS fixing

12.SOS-interval report mode.After long press for 3 seconds,then the device will fix the GPS and report +RESP:GTSOS every <SOS report interval> seconds ,the backend server could send command to stop the report. (Refer to “AT+GTRTO” command, set <Sub command> to “E”).

✧ <SOS report interval>: The interval of reporting +**RESP:GTSOS**. Unit: second.

The acknowledgement message of **AT+GTFKS** command:

➤ **+ACK:GTFKS**

Example:

+ACK:GTFKS,110100, 358688000000158,,000A, 20110101101854,000AS

Parameter	Length (byte)	Range/Format	Default
Firmware Version	6	XX0000 – XXFFFF, X ∈ {'A'-'Z','0'-'9'}	
Unique ID	15	IMEI	
Device name	10		
Serial number	4	0000 – FFFF	
Send time	14	YYYYMMDDHHMMSS	
Count number	4	0000 – FFFF	
Tail character	1	\$	\$

3.2.11. Real Time Operation

The **AT+GTRTO** command is used to request real time operation report.

➤ **AT+GTRTO=**

Example: AT+GTRTO=AIR11,0,,,,,,,,,,,,,000BS			
Parameter	Length (byte)	Range/Format	Default
Password	4 – 6	'0' – '9', 'a' – 'z', 'A' – 'Z'	AIR11
Sub command	<=2	0-0x15	
Reserved	0		
Reserved	0		
Reboot duration	0-5	0-43200 (Unit: minutes)	
Vibration duration	1-3	1-120 (Unit: seconds)	
Reserved	1		
Reserved	1		
interval	0-5	5-86400 (Unit:seconds)	
Reserved	0		
Counter	<=3	1-999	
Reserved	0		
Reserved	0		
Reserved	0		
Serial number	4	0000 – FFFF	
Tail character	1	\$	\$

✧ *<Sub command>*: A numeric to indicate the sub command to execute.

0 (**GPS**): Request GPS related information, including setting of *<GPS on need>*, *<Report items mask>*, *<Report mask>* of fixed report, GPS antenna type, GPS antenna status and the last known time of successful GPS fixing.

1 (**RTL**): Request the device to report its current position.

2 (**READ**): Request the device to report its entire configuration.

3 (**REBOOT**): Reboot the device remotely.

4 (**RESET**): Reset all parameters to factory default except parameter of **AT+GTBSI**, **AT+GTSRI**.

5 (**PWROFF**): Power off the device remotely.

6 (**CID**): Request the device to report the ICCID of the installed SIM card.

7 (**CSQ**): Request the device to report the current GSM signal level.

8 (**VER**): Request the device to report version information including the device type, the firmware version and the hardware version.

9 (**BAT**): Request the device to report power supply related information including the external power supply status, current voltage of the battery, the battery charging status and the working mode of LED.

A: (**TMZ**): Request the device to report the time zone setting.

B: **(INF)**: Read the device information report function. The corresponding information will be reported via the message **+RESP: GTINF**.

C: **(GSM)**: Request the device to report the GSM information. The corresponding information will be reported via the message **+RESP: GTGSM**.

D: Reserved.

E: **(SSR)**: Stop SOS event report.

F: Reserved.

10: **(VBR)**: Request the device to vibrate for *Vibration duration* seconds.

11: Reserved.

12: Reserved.

13: **(CLEARBUFF)**: Request the device to clear buffer.

14: **(WIFI)**: Request the device to report the WIFI information. The corresponding information will be reported via the message **+RESP: GTWIFR**.

15: Reserved.

1A: Request the device send Google link and GTLBS when the number is in the white list (only send this command by SMS)

✧ *<Reboot duration>*:

For REBOOT: The device powers off then will power on after reboot duration. The unit is minute. If the value is 0 or empty, the device will reboot immediately.

✧ *<Vibration duration>*:

For VBR: duration of vibration. Unit: seconds.

✧ *<interval>*:

For WIFI:

The interval time to report the WLAN information.

✧ *<Counter>*:

For WIFI:

The number of times the device reports the WLAN information.

The acknowledgement message of **AT+GTRTO** command:

➤ **+ACK:GTRTO**

Example:			
+ACK:GTRTO,110100, 358688000000158,,GPS,000B, 20110101101854,000BS			
Parameter	Length (byte)	Range/Format	Default
Firmware Version	6	XX0000 – XXFFFF, X ∈ {'A'-'Z','0'-'9'}	
Unique ID	15	IMEI	
Device name	10		
Sub command	<=6	Sub command string	
Serial number	4	0000 – FFFF	
Send time	14	YYYYMMDDHHMMSS	
Count number	4	0000 – FFFF	
Tail character	1	\$	\$

3.2.12. White Call List Configuration

The AT+GTWLT command is used to set white call list table.

➤ AT+GTWLT=

Example: AT+GTWLT= AIR11,1,1,2,13813888888,13913999999,,000C\$			
Parameter	Length (byte)	Range/Format	Default
Password	4 – 6	'0' – '9', 'a' – 'z', 'A' – 'Z'	AIR11
call filter	1	0 1 2	1
mobile start	<=2	1-10	1
mobile end	<=2	1-10	1
white number list	<=20*10		
Reserved	0		
Reserved	0		
Reserved	0		
Reserved	0		
Serial number	4	0000 – FFFF	
Tail character	1	\$	\$

- ✧ <call filter>: A numeric to indicate whether to filter the incoming call according to <white number list> and <direct number list> before it try to send Google link SMS to the incoming number.
 - 0:** Do not return a Google link SMS to incoming number no matter what the parameter < MT call mode > was set and no matter whether the incoming number is in the <white number list> or <direct number list>.
 - 1:** Do not filter the incoming call. It will return a Google link SMS to the incoming number as long as the parameter < MT call mode > was set as 1.
 - 2:** Filter the incoming call. If the incoming number isn't in <white number list> or <direct number list>, it won't return a Google link SMS to the incoming number even if the parameter < MT call mode > was set as 1.
- ✧ <mobile start>: A numeric to indicate the first index of the white call number to input. For example, if it is 1, it will update the white call list from the 1st one. If it is empty, it should not include <white number list> later.
- ✧ <mobile end>: A numeric to indicate the last index of the white call number to input. For example, if it is 2, It will update the white call list until the 2nd one. If it is empty, it should not include <white number list> later.
- ✧ <white number list>: A phone number list. It could include several phone numbers. And two close phone numbers are separated with ",". The number of the phone number in the list is up to the parameter <mobile start> and <mobile end>. For example, if <mobile start> is 1 and is <mobile end> 2, the <white number list> should include 2 phone numbers and the two numbers are separated by with ",".

The acknowledgment message of the **AT+GTWLT** command:

➤ **+ACK:GTWLT**

Example: +ACK:GTWLT,110100,358688000000158,,000C,20110101101854,0025\$			
Parameter	Length (byte)	Range/Format	Default
Firmware Version	6	XX0000 – XXXFFF, X ∈ {'A'-'Z','0'-'9'}	
Unique ID	15	IMEI	
Device name	10		
Serial number	4	0000 – FFFF	
Send time	14	YYYYMMDDHHMMSS	
Count number	4	0000 – FFFF	
Tail character	1	\$	\$

Note:

It is necessary to make sure the total size of the command is not greater than 160 if it is sent via SMS.

3.2.13. Google link SMS configuration

The **AT+GTGLM** command is used to configure whether to send SMS with Google link for SOS and GEO event.

➤ **AT+GTGLM=**

Example: AT+GTGLM= AIR11,1,1,2,1381388888,1391399999,,,,000D\$			
Parameter	Length (byte)	Range/Format	Default
Password	4 – 6	'0' – '9', 'a' – 'z', 'A' – 'Z'	AIR11
Google mode	1	0 1	0
Mobile start	1	1-3	1
Mobile end	1	1-3	1
Direct number list	<=20*3		
Reserved	0		
Reserved	0		
Reserved	0		
Reserved	0		
Serial number	4	0000 – FFFF	
Tail character	1	\$	\$

✧ *<Google mode>*: A numeric to indicate whether to send a SMS with Google link to the number in *<direct number list>* for SOS and GEO event.

0: Do not send a SMS with Google link to the number is in the *<direct number list>* for SOS and GEO event.

1: Send a SMS with Google link to the number is in the *<direct number list>* for SOS and GEO event.

- ✧ **<Mobile start>**: A numeric to indicate the first index of the direct number to input. For example, if it is 1, it will update the white call list from the first one. If it is empty, it should not include **<direct number list>** later.
- ✧ **<Mobile end>**: A numeric to indicate the last index of the direct number to input. For example, if it is 2, it will update the direct list until the 2nd one. If it is empty, it should not include **<direct number list>** later.
- ✧ **<Direct number list>**: A phone number list. It could include several phone numbers. And two close phone numbers are separated with ",". The number of the phone number in the list is up to the parameter **<mobile start>** and **<mobile end>**. For example, if **<mobile start>** is 1 and **<mobile end>** is 2, the **<direct number list>** should include 2 phone numbers and the two numbers are separated by with ",".

The acknowledgment message of the **AT+GTGLM** command:

➤ **+ACK:GTGLM**

Example: +ACK: GTGLM, 110100, 358688000000158,,000D, 20110101101854,0025\$			
Parameter	Length (byte)	Range/Format	Default
Firmware Version	6	XX0000 – XXFFFF, X ∈ {'A'-'Z','0'-'9'}	
Unique ID	15	IMEI	
Device name	10		
Serial number	4	0000 – FFFF	
Send time	14	YYYYMMDDHHMMSS	
Count number	4	0000 – FFFF	
Tail character	1	\$	\$

3.2.14. Protocol watchdog(optional)

The **AT+GTD0G** command is used to reboot the device in a time based on manner

This helps the device avoid working in an exception status for a long time. Besides these two automatically reboot method, the device also supports to use the digital input to trigger the reboot manually.

➤ **AT+GTD0G =**

Example: AT+GTD0G=AIR11,0,60,30,0200,,1,0,30,50,,,0011\$			
Parameter	Length (byte)	Range/Format	Default
Password	4 – 6	'0' – '9', 'a' – 'z', 'A' – 'Z'	AIR11
Mode	1	0 1	0
reserved	0		
Interval	<=2	1 -30 (unit: days)	30
Time	4	HHMM	0200
reserved	0		
Report before reboot	1	0 1	1

reserved	0		
Gsm interval	<=3	0 5-255(unit:min)	0
Pdp interval	<=3	0 4-255(unit:min)	0
reserved	0		
reserved	0		
Serial number	4	0000 – FFFF	
Tail character	1	\$	\$

✧ <Mode>: working mode.

0: disable this function

1: reboot periodically according to the <Interval> and <Time> setting.

✧ <Interval>: the interval to reboot the device in day.

✧ <Time>: at what time to perform the reboot operation when <Interval> is met.

✧ <Report before reboot>: whether to report the +RESP: GTDOG message before reboot.

0: no report

1: report.

If this is enabled, the device will make a real-time location before sending the messages in order to send it with the current location information.

✧ <Gsm interval>: This is the time to query for no network,the unit is minutes,when this time is reached, the device will reboot.

✧ <Pdp interval>: When ipinit failed more than three times and the duration is this time,the module will reboot,the unit is minutes.

Attention:When the Gsm interval and the Pdp interval are equal to 0, the corresponding function will not be turned on.

NOTE: this function is optional.

The acknowledgment message of the AT+ GTDOG command:

➤ +ACK: GTDOG

Example:			
+ACK: GTDOG,110100, 358688000000158,,0011, 20110101101854,0029\$			
Parameter	Length (byte)	Range/Format	Default
Firmware Version	6	XX0000 – XXFFFF, X ∈ {'A'-'Z','0'-'9'}	
Unique ID	15	IMEI	
Device name	10		
Serial number	4	0000 – FFFF	
Send time	14	YYYYMMDDHHMMSS	
Count number	4	0000 – FFFF	
Tail character	1	\$	\$

3.2.15. WIFI Settings

The AT+GTWIF command is used to configure the WIFI parameter.

➤ **AT+ GTWIF =**

Example:

AT+GTWIF=AIR11,0,ap1,ap1-psw,ap2,ap2-psw,ap3,ap3-psw,,,,,,,,,0021\$

Parameter	Length (byte)	Range/Format	Default
Password	4 – 6	‘0’ – ‘9’, ‘a’ – ‘z’, ‘A’ – ‘Z’	AIR11
mode	1	0-3	0
Ap1 name	<=20		
Ap1 password	<=20		
Ap2 name	<=20		
Ap2 password	<=20		
Ap3 name	<=20		
Ap3 password	<=20		
Reserved	0		
Reserved	0		
Reserved	0		
Reserved	0		
Reserved	0		
Reserved	0		
Reserved	0		
Reserved	0		
Serial number	4	0000 – FFFF	
Tail character	1	\$	\$

✧ **<Mode>:**

0: Mobile data mode only.

1: Mobile data preferred mode.

2: WIFI preferred mode.

3: WIFI mode only mode.

✧ **<Ap>:** Wireless access point.

Notice:The Wireless access points must be different.

✧ **<Ap password>:** Wireless access point password

The acknowledgment message of the **AT+GTWIF** command:

➤ **+ACK: GTWIF**

Example:

+ACK: GTWIF,110100, 358688000000158,,0013, 20110101101854,0029\$

Parameter	Length (byte)	Range/Format	Default
Firmware Version	6	XX0000 – XXFFFF, $X \in \{'A'-'Z', '0'-'9'\}$	
Unique ID	15	IMEI	
Device name	10		
Serial number	4	0000 – FFFF	
Send time	14	YYYYMMDDHHMMSS	
Count number	4	0000 – FFFF	
Tail character	1	\$	\$

3.2.16. AGPS Setting

The AT+GTAGP command is used to set AGPS server information.

➤ **AT+GTAGP =**

Example: AT+GTAGP=AIR11,1,,,,,,,,120,,,,,,,,0020\$			
Parameter	Length (byte)	Range/Format	Default
Password	4-6	'0'-'9', 'a'-'z', 'A'-'Z'	AIR11
AGPS mode	1	0 1	0
Reserved	0		
Reserved	0		
Reserved	0		
Reserved	0		
Reserved	0		
Reserved	0		
Online update interval	<=4	300-1440minutes	360
Reserved	0		
Reserved	0		
Reserved	0		
Reserved	0		
Reserved	0		
Reserved	0		
Reserved	0		
Sequence number	<=4	0-FFFF	
Tail character	1	\$	\$

✧ <AGPS mode>:

0: not use AGPS.

1: use AssistNow online AGPS.

✧ <Online update Interval>: Update local online data from AssistNow online server time interval.

The acknowledgment message of the **AT+GTAGP** command:

➤ **+ACK: GTAGP**

Example: +ACK: GTAGP, 210110,012207000000015,,0020,20150725113330,0023\$			
Parameter	Length (byte)	Range/Format	Default
Firmware Version	6	XX0000 – XXFFFF, X ∈ {'A'-'Z','0'-'9'}	
Unique ID	15	IMEI	
Device name	10		
Serial number	4	0000 – FFFF	
Send time	14	YYYYMMDDHHMMSS	
Count number	4	0000 – FFFF	
Tail character	1	\$	\$

3.2.17. Temperature detection

The **AT+GTTMP** command is used to configure the parameters for temperature detection.

➤ **AT+GTTMP =**

Example: AT+GTTMP= AIR11,2,20,1,60,-20,,,,,,0020\$			
Parameter	Length (byte)	Range/Format	Default
Password	4 – 6	'0' – '9', 'a' – 'z', 'A' – 'Z'	AIR11
Mode	1	0-3	0
Sampling Interval	1-3	1 – 255(×30s)	20
Detect duration	1-3	1 – 255(times Sampling Interval)	1
High temperature threshold	1-5	-30 – 75℃	
Low temperature threshold	1-5	-30 – 75℃	
Reserved	0		
Reserved	0		
Reserved	0		
Reserved	0		
Reserved	0		
Reserved	0		
Count number	4	0000 – FFFF	
Tail character	1	\$	\$

✧ *<Mode>*:

0: disable this function

1: Report the message **+RESP:GTTMP** to the backend server when the temperature is

greater than *<High temperature threshold>*.

2: Report the message **+RESP:GTTMP** to the backend server when the temperature is less than *<Low temperature threshold>*.

3: Report the message **+RESP: GTTMP** to the backend server when both the temperature is greater than *<High temperature threshold>* and the temperature is less than *<Low temperature threshold>*.

NOTE:

The device will report the current position according to the result of the latest GPS fixing.

- ✧ *<Sampling interval>*: The interval for the temperature sensor to take a sample.
- ✧ *<Detect duration>*: The period to analysis the sample set. When all the sample's temperature is greater than *<High temperature threshold>* or less than *<Low temperature threshold>*, report the message **+RESP:GTTMP** to the backend server according to the value of *<Mode>*.
- ✧ *<High temperature threshold >*: Unit:℃ (Only supports integer)
- ✧ *<Low temperature threshold >*: Unit:℃ (Only supports integer)

The acknowledgment message of the **AT+ GTTMO** command:

➤ **+ACK: GTTMP**

Example:

+ACK: GTTMP,110100, A5868800000015,,0005, 20110101101854,0005\$

Parameter	Length (byte)	Range/Format	Default
Firmware Version	6	XX0000 – XXXFFF, X ∈ {'A'-'Z','0'-'9'}	
Unique ID	14	MEID	
Send time	14	YYYYMMDDHHMMSS	
Count number	4	0000 – FFFF	
Tail character	1	\$	\$

3.2.18. Auto unlock SIM-PIN

The **AT+GTPIN** command is used to configure whether to automatically unlock the PIN of the SIM card in the device.

➤ **AT+GTPIN=**

Example:

AT+GTPIN= AIR11,1,1234,1,,,,,000E\$			
Parameter	Length (byte)	Range/Format	Default
Password	4 – 6	‘0’ – ‘9’, ‘a’ – ‘z’, ‘A’ – ‘Z’	AIR11
auto unlock PIN	1	0 1	1
PIN	4-8	‘0’ – ‘9’	
PIN checking	1	0 1	
Reserved	0		
Reserved	0		
Reserved	0		
Reserved	0		
Serial number	4	0000 – FFFF	
Tail character	1	\$	\$

- ✧ *<auto unlock PIN>*: A numeric to indicate whether to unlock the SIM-PIN for the device.
 - 0**: Do not unlock SIM-PIN automatically.
 - 1**: Each time the device powers on, it will detect whether the SIM card is locked with a PIN. If it is locked, the device will unlock the PIN automatically for one time.
- ✧ *<PIN>*: The PIN code which is used when unlocks PIN automatically. If it is empty, the PIN code saved in the device will be cleared.
- ✧ *<PIN checking >*: A numeric to indicate whether to lock the device with SIM-PIN.
 - 0**: Do not lock the SIM-PIN.
 - 1**: Lock the SIM-PIN.

The acknowledgment message of the **AT+GTPIN** command:

➤ **+ACK:GTPIN**

Example: +ACK:GTPIN,110100, 358688000000158,,000E, 20110101101854,0027\$			
Parameter	Length (byte)	Range/Format	Default
Firmware Version	6	XX0000 – XXXFFF, X ∈ {'A'-'Z','0'-'9'}	
Unique ID	15	IMEI	
Device name	10		
Serial number	4	0000 – FFFF	
Send time	14	YYYYMMDDHHMMSS	
Count number	4	0000 – FFFF	
Tail character	1	\$	\$

3.2.19. Working Mode Switch

The **AT+GTWMS** command is used to switch between different working modes of the device.

➤ **AT+GTWMS=**

Example: AT+GTWMS=AIR11,0,60,180,60,2,,,,,001C\$	
---	--

Parameter	Length (byte)	Range/Format	Default
Password	4 – 6	'0' – '9', 'a' – 'z', 'A' – 'Z'	AIR11
Working Mode	1	0-5	0
Wakeup Interval	<=4	10-6000Minutes	60
Pursuit Interval	<=5	3-86400sec	180
Sleep Duration	<=5	1-10080(7*24*60)Minutes	60
Time to Change State	<=2	1-99Minutes	2
Delay to Sleep	<=2	10-99Minutes	10
Pursuit Duration	<=4	0 1-1440Minutes	0
Reserved	0		
Reserved	0		
Reserved	0		
Serial number	4	0000 – FFFF	
Tail character	1	\$	\$

✧ <Working Mode>: The working mode of the device.

0: Normal mode. The device is ready to receive any command via OTA.

+RESP:GTWMS will be reported if the device switches to normal mode from other mode.

1: Eco mode. The device will wake up according to the <Wakeup Interval> setting, and send a +RESP:GTRTL message upon each wakeup before going back to deep sleep. In this mode, AT+GTFRI and AT+GTGEO will be suspended.

2: Parking mode. AT+GTFRI and AT+GTNMD will work normally, so when the device is stationary and there is no data to be sent for the period of time specified by <Time to Change State>, the device will enter sleep. The device wakes up when motion is detected or there is a message to be sent.

3: Pursuit mode. The device will remain awake and send RESP:GTFRI at an interval specified by <Pursuit Interval>, and AT+GTFRI and AT+GTNMD will be ignored.

4: Flight mode. The device will go to deep sleep for a period of time specified by <Sleep Duration>. All messages will be suspended except +RESP:GTPFA. Upon reboot, the device returns to normal mode.

5: Log mode. The device will shut down network for a period of time specified by <Sleep Duration>. After the period of time specified by <Sleep Duration> has elapsed, the device will turn on the network and report the messages buffered during <Sleep Duration>. After turning on the network, the device will check every minute if there are buffered messages. If there is no buffered message to report, the device will shut down network again for the time period specified by <Sleep Duration>.

✧ <Wakeup Interval>: The interval for waking up the device.

✧ <Pursuit Interval>: The time interval for starting GNSS to get the current position.

✧ <Sleep Duration>: The period of time the device stays asleep.

✧ <Time to Change State>: The amount of time to wait before entering sleep when the device is stationary and there is no data to be sent.

✧ <Delay to Sleep>: The working mode of the device is Log mode. The maximum amount of time to wait before entering sleep after turning on network. The device will check every minute if there are buffered messages. If there is no buffered message to report, the device will

shut down the network immediately.

✧ <Pursuit Duration>: The period of time the device go into Pursuit mode.

If <Pursuit Duration> is set to 0, the device will go into Pursuit mode all along.

If <Pursuit Duration> is not set to 0, the device will go out of Pursuit mode after <Pursuit Duration>. If the device reboot for any reason, the device could go out of Pursuit mode.

Note:

In Eco mode or Log mode the device will send +RESP:GTDSW each time when it enters or exits sleep.

In Parking mode the device will send +RESP:GTDSW each time when it enters sleep.

In Flight mode the device will send +RESP:GTDSW each time before reboot.

In Log mode, Check interval of GTFRI need to be more than 2 minutes.

The acknowledgment message of the AT+GTWMS command:

➤ +ACK:GTWMS

Example: +ACK:GTWMS,110100,358688000000158,,000E,20110101101854,0027\$			
Parameter	Length (byte)	Range/Format	Default
Firmware Version	6	XX0000 – XXXFFF, X ∈ {'A'-'Z','0'-'9'}	
Unique ID	15	IMEI	
Device name	10		
Serial number	4	0000 – FFFF	
Send time	14	YYYYMMDDHHMMSS	
Count number	4	0000 – FFFF	
Tail character	1	\$	\$

3.3. Report

3.3.1. Position Related Report

3.3.1.1.General Position Report

- **+RESP:GTGEO:** report of AT+GTGEO
- **+RESP:GTSPD:** report of AT+GTSPD
- **+RESP:GTSOS:** report after long press the function if the function key is enabled and the mode is SOS mode.
- **+RESP:GTPNL:** The first location after the device powers on.
- **+RESP:GTDOG:** the protocol watchdog reboot message.

Example:

Report Format:

Parameter	Length (byte)	Range/Format	Default
Firmware Version	6	XX0000 – XXXFFF $X \in \{'A'-'Z', '0'-'9'\}$	
Unique ID	15	IMEI	
Device name	10		
Report ID	1	0-4	
Report type	1	0-7	
WMS Working Mode	1	0-5	
Number	<=2	0 – 15	
GPS accuracy	<=4	0 1 – 50	
Speed	<=5	0.0 – 999.9km/h	
Azimuth	<=3	0 – 359	
Altitude	<=8	(-)xxxxx.x m	
Longitude	<=11	(-)xxx.xxxxxx	
Latitude	<=10	(-)xx.xxxxxx	
GPS UTC time	14	YYYYMMDDHHMMSS	
MCC	4	0XXX	
MNC	4	0XXX	
LAC	4	XXXX	
Cell ID	6	XXXXXX	
CSQ RSSI	2	0 – 31 99	
Network	1	0-7	
battery percentage	3	0-100	
Send time	14	YYYYMMDDHHMMSS	
Count number	4	0000 – FFFF	
Tail character	1	\$	\$

- ✧ <Report ID>: ID of the report for +RESP:GTGEO, 0 for other reports.
 - For +RESP:GTGEO
ID of Geo-Fence in +RESP:GTGEO,
- ✧ <Report type>: type of the report for all report
 - For +RESP:GTGEO
0: exit the corresponding Geo-Fence.
1: enter the corresponding Geo-Fence.
 - For +RESP:GTSPD
1: Inside the speed range.
2: Outside the speed range.
3. Over max speed.
 - For +RESP:GTSOS, +RESP:GTPNL,+RESP:GTDOG
Bit0(1): 0, it detects non-movement; 1, it detects movement.
Bit1(2): 0, devices is not charging; 1, devices is charging.
Bit2(4): 0, no external power supply; 1, it detects external power supply.
- ✧ <WMS Working Mode> The current working mode of AT+GTWMS.
 - 0: Normal mode.
 - 1: Eco mode.
 - 2: Parking mode.
 - 3: Pursuit mode.
 - 4: Flight mode.
 - 5: Log mode.
- ✧ <Number>: Number of points in one report message.This is always 1.
- ✧ <GPS accuracy>:

If <HDOP as GPS accuracy> is set as 1, GPS accuracy represents HDOP. The HDOP defined in NMEA0183. The range of value is 1– 50. The smaller the value, the higher the precision. Different from NMEA0183, 0 here means no fix, while GPS accuracy between 0 and 1 is set to 1.

If <HDOP as GPS accuracy> is set as 0, GPS accuracy is related with SNR. The higher SNR value, the smaller the value. The range of value is 1– 50, 0 here means no fix.
- ✧ <Speed>: The speed from GPS.
- ✧ <Azimuth> The azimuth from GPS.
- ✧ <Altitude>: The height above sea level from GPS.
- ✧ <Longitude>:The longitude of the current position. The format is “(-)xxx.xxxxxx” and the value range is from“-180.000000” to “180.000000”. The unit is degree. West longitude is defined as negative starting with minus “-” and east longitude is defined as positive without“+”.
- ✧ <Latitude>: The latitude of the current position. The format is “(-)xx.xxxxxx” and the value range is from“-90.000000” to “90.000000”. The unit is degree. South Latitude is defined as negative starting with minus “-” and north Latitude is defined as positive without “+”.
- ✧ <GPS UTC time>: UTC time from GPS.

- ✧ <MCC>: Mobile country code. It is 3 digits in length and ranges from 000 to 999.
- ✧ <MNC>: Mobile network code. It is 3 digits in length and ranges from 000 to 999.
- ✧ <LAC>: Location area code.
- ✧ <Cell ID>: Cell ID.
- ✧ <Network>: The current working network of the device.
 - 0: GSM.**
 - 1: RESERVE.**
 - 2: UTRAN.**
 - 3: GSMW/EGPS.**
 - 4: UTRANW/HSDPA.**
 - 5: UTRANW/HSUPA.**
 - 6: UTRANW/HSDPA and HSUPA.**
 - 7: E-UTRAN.**
- ✧ <battery percentage>: The current volume of the battery in percentage.

3.3.1.2.Important Position Report

- +RESP:GTFRI: report of AT+GTFRI
- +RESP:GTRTL: report of AT+GTRTO-RTL
- +RESP:GTNMR: non movement is detected by motion sensor, according to the setting of AT+GTNMD

- +RESP:GTFRI:

Report Format:

+RESP:GTFRI,423031,866873025895726,,0,1,1,0,1,16,0.0,351,51.6,121.391063,31.164633,20181212072535,460,00,1877,DAE,00,3,85,20181212072535,002C\$			
Parameter	Length (byte)	Range/Format	Default
Firmware Version	6	XX0000 – XXXFFF X ∈ {'A'-'Z','0'-'9'}	
Unique ID	15	IMEI	
Device name	10		
Report ID	1	0-4	
Report type	1	0-7	
Motion state	1	0 1	
WMS Working Mode	1	0-5	
Number	<=2	0 – 15	
GPS accuracy	<=4	0 1 – 50	
Speed	<=5	0.0 – 999.9km/h	
Azimuth	<=3	0 – 359	
Altitude	<=8	(-)xxxxx.x m	
Longitude	<=11	(-)xxx.xxxxxx	
Latitude	<=10	(-)xx.xxxxxx	
GPS UTC time	14	YYYYMMDDHHMMSS	
MCC	4	0XXX	

MNC	4	0XXX	
LAC	4	XXXX	
Cell ID	6	XXXXXX	
CSQ RSSI	2	0 – 31 99	
Network	1	0-7	
battery percentage	3	0-100	
Send time	14	YYYYMMDDHHMMSS	
Count number	4	0000 – FFFF	
Tail character	1	\$	\$

✧ <Report type>:

Bit0(1): 0, it detects non-movement; 1, it detects movement.

Bit1(2): 0, devices is not charging; 1, devices is charging.

Bit2(4): 0, no external power supply; 1, it detects external power supply.

✧ <Number>: Number of points in one report message. According to the setting of fixed report, there could be up to 15 points in one +RESP:GTFRI report. If there is more than 1 point in the report, information from <GPS accuracy> to <Reserved> is repeated for each point.

✧ <Motion state>: The current motion state of the device.

0: No motion.

1: Motion detected.

✧ <WMS Working Mode> The current working mode of AT+GTWMS.

0: Normal mode.

1: Eco mode.

2: Parking mode.

3: Pursuit mode.

4: Flight mode.

5: Log mode.

✧ <Network>: The current working network of the device.

0: GSM.

1: RESERVE.

2: UTRAN.

3: GSMW/EGPS.

4: UTRANW/HSDPA.

5: UTRANW/HSUPA.

6: UTRANW/HSDPA and HSUPA.

7: E-UTRAN.

➤ +RESP:GTRTL

Report Format:

+RESP:GTRTL,423031,866873025895726,,0,1,10,1,0,0.4,258,69.8,121.391650,31.164202,20181212091559,460,00,1877,8549,00,3,99,20181212093027,00C3\$			
Parameter	Length (byte)	Range/Format	Default
Firmware Version	6	XX0000 – XXXFFF X ∈ {'A'-'Z','0'-'9'}	
Unique ID	15	IMEI	

Device name	10		
Report ID	1	0-4	
Report type	1	0-7	
Time to Wakeup	<=3	0 10-6000Minutes	
WMS Working Mode	1	0-5	
Number	<=2	0 – 15	
GPS accuracy	<=4	0 1 – 50	
Speed	<=5	0.0 – 999.9km/h	
Azimuth	<=3	0 – 359	
Altitude	<=8	(-)xxxxx.x m	
Longitude	<=11	(-)xxx.xxxxxx	
Latitude	<=10	(-)xx.xxxxxx	
GPS UTC time	14	YYYYMMDDHHMMSS	
MCC	4	0XXX	
MNC	4	0XXX	
LAC	4	XXXX	
Cell ID	6	XXXXXX	
CSQ RSSI	2	0 – 31 99	
Network	1	0-7	
battery percentage	3	0-100	
Send time	14	YYYYMMDDHHMMSS	
Count number	4	0000 – FFFF	
Tail character	1	\$	\$

✧ <Report type>:

0: The message is requested by the sub command RTL of RTO.

1: The message is reported because the device wakes up from deep sleep while the working mode of AT+GTWMS is eco mode.

✧ <Time to Wakeup>: The number of minutes to wait before device wakeup.0 mean the report message is generated by request using the AT+GTRTO command.

➤ +RESP:GTNMR

Report Format:

+RESP:GTNMR,423031,866873025895726,,0,0,0,5,1,37,0,0,1,50.2,121.391218,31.164952,20181213023645,460,00,1877,8549,00,3,100,20181213023646,001F\$			
Parameter	Length (byte)	Range/Format	Default
Firmware Version	6	XX0000 – XXFFFF X ∈ {'A'-'Z','0'-'9'}	
Unique ID	15	IMEI	
Device name	10		
Report ID	1	0-4	
Report type	1	0-3	
Current Working Mode	1	0-5	

Number	<=2	0 – 15	
GPS accuracy	<=4	0 1 – 50	
Speed	<=5	0.0 – 999.9km/h	
Azimuth	<=3	0 – 359	
Altitude	<=8	(-)xxxxx.x m	
Longitude	<=11	(-)xxx.xxxxxx	
Latitude	<=10	(-)xx.xxxxxx	
GPS UTC time	14	YYYYMMDDHHMMSS	
MCC	4	0XXX	
MNC	4	0XXX	
LAC	4	XXXX	
Cell ID	6	XXXXXX	
CSQ RSSI	2	0 – 31 99	
Network	1	0-7	
battery percentage	3	0-100	
Send time	14	YYYYMMDDHHMMSS	
Count number	4	0000 – FFFF	
Tail character	1	\$	\$

✧ <Report type>:

0: The state of the device changed from motion to rest.

1: The state of the device changed from rest to motion.

2: The state of the device changed to freefall

✧ <Current Working Mode>: The current working mode of AT+GTWMS.

3.3.1.3. Location by Call Report

➤ +RESP:GTLBC:

+RESP:GTLBC,110100,358688000000158,,+8613800000000,0,1,4,3,92,70.0,121.354335,31.22 2073,20110214024537,0460,0000,18d8,6141,10,,3,99,20110214024537,0013\$			
Parameter	Length (byte)	Range/Format	Default
Firmware Version	6	XX0000 – XXFFFF X ∈ {'A'-'Z','0'-'9'}	
Unique ID	15	IMEI	
Device name	10		
Call number	20	Phone number	
WMS Working Mode	1	0-5	
GPS accuracy	<=4	0 1 – 50	
Speed	<=5	0.0 – 999.9km/h	
Azimuth	<=3	0 – 359	
Altitude	<=8	(-)xxxxx.x m	
Longitude	<=11	(-)xxx.xxxxxx	
Latitude	<=10	(-)xx.xxxxxx	
GPS UTC time	14	YYYYMMDDHHMMSS	
MCC	4	0XXX	

MNC	4	0XXX	
LAC	4	XXXX	
Cell ID	6	XXXXXX	
CSQ RSSI	2	0 – 31 99	
Reserved	0		
Network	1	0-7	
battery percentage	3	0-100	
Send time	14	YYYYMMDDHHMMSS	
Count number	4	0000 – FFFF	
Tail character	1	\$	\$

✧ *<Call number>*: the phone number of the incoming call which initiates this report.

3.3.1.4. Location by SMS

➤ +RESP:GTLBS:

**+RESP:GTLBC,110100,358688000000158,,+8613800000000,0,1,4.3,92,70.0,121.354335,31.22
2073,20110214024537,0460,0000,18d8,6141,10,,3,99,20110214024537,0013\$**

Parameter	Length (byte)	Range/Format	Default
Firmware Version	6	XX0000 – XXFFFF X ∈ {'A'-'Z','0'-'9'}	
Unique ID	15	IMEI	
Device name	10		
SMS number	20	Phone number	
WMS Working Mode	1	0-5	
GPS accuracy	<=4	0 1 – 50	
Speed	<=5	0.0 – 999.9km/h	
Azimuth	<=3	0 – 359	
Altitude	<=8	(-)xxxxx.x m	
Longitude	<=11	(-)xxx.xxxxxx	
Latitude	<=10	(-)xx.xxxxxx	
GPS UTC time	14	YYYYMMDDHHMMSS	
MCC	4	0XXX	
MNC	4	0XXX	
LAC	4	XXXX	
Cell ID	6	XXXXXX	
CSQ RSSI	2	0 – 31 99	
Reserved	0		
Network	1	0-7	
battery percentage	3	0-100	
Send time	14	YYYYMMDDHHMMSS	
Count number	4	0000 – FFFF	
Tail character	1	\$	\$

✧ *<SMS number>*: the phone number of the incoming SMS which initiates this report.

3.3.1.5. Location as centre of Geo-Fence

If function key mode was set as 2 and long press function key to switch on Geo-Fence 0, the terminal will start GPS fixing to get the current position as the centre of Geo-Fence 0. And after GPS fixing finishes, the terminal will report the message **+RESP:GTGCR**.

➤ **+RESP:GTGCR:**

Example: +RESP:GTGCR,110100,358688000000158,,3,50,2,2,2,0.4,296,-5.4,121.391055,31.164473,20110714104934,0460,0000,1878,0873,10,,1,99,20110714104934,000C\$			
Parameter	Length (byte)	Range/Format	Default
Firmware Version	6	XX0000 – XXXFFF $X \in \{'A'-'Z', '0'-'9'\}$	
Unique ID	15	IMEI	
Device name	10		
Geo mode	1	0 1 2 3	
Geo radius	<=7	50 – 6000000m	
Geo check interval	<=5	1 - 24	
WMS Working Mode	1	0-5	
GPS accuracy	<=4	0 1 – 50	
Speed	<=5	0.0 – 999.9km/h	
Azimuth	<=3	0 – 359	
Altitude	<=8	(-)XXXXXX.X m	
Longitude	<=11	(-)XXX.XXXXXXX	
Latitude	<=10	(-)XX.XXXXXXX	
GPS UTC time	14	YYYYMMDDHHMMSS	
MCC	4	0XXX	
MNC	4	0XXX	
LAC	4	XXXX	
Cell ID	6	XXXXXX	
CSQ RSSI	2	0 – 31 99	
Reserved	0		
Network	1	0-7	
battery percentage	3	0-100	
Send time	14	YYYYMMDDHHMMSS	
Count number	4	0000 – FFFF	
Tail character	1	\$	\$

- ✧ *<Geo mode>*: the new mode of Geo-Fence 0. Please refer to the parameter *<Mode>* in the command **AT+GTGEO**.
- ✧ *<Geo radius>*: the radius of Geo-Fence 0. Please refer to the parameter *<Radius>* in the command **AT+GTGEO**.
- ✧ *<Geo check interval>*: the check interval of Geo-Fence 0. Please refer to the parameter *<Check interval>* in the command **AT+GTGEO**.

- ✧ *<Longitude>*: The longitude of the current position. If it is successful to fix position this time, this longitude will be replace the longitude of the centre of Geo-Fence 0.
- ✧ *<Latitude>*: The latitude of the current position. If it is successful to fix position this time, this latitude will be replaced the latitude of the centre of Geo-Fence 0.

3.3.1.6. History report

- **+RESP:GTHIS**: If the **BUFFER** is full, the main data of **+RESP:GTFRI** that be discarded can be stored in another queue. When all buffered messages have been sent, these data will be sent to the backend server as **+RESP:GTHIS**.

Example:

RESP:GTHIS,423038,869912030079525,ATWG7,,0,1,33,0.4,327,82.4,121.391360,31.164297,20190426034431,460,00,1877,db0,,,46,20190426055440,0107\$

Report Format:

Parameter	Length (byte)	Range/Format	Default
Firmware Version	6	XX0000 – XXXFFF X ∈ {'A'-'Z','0'-'9'}	
Unique ID	15	IMEI	
Device name	10		
Reserved	0		
Report type	1		
Number	<=2	0 – 15	
GPS accuracy	<=4	0 1 – 50	
Speed	<=5	0.0 – 999.9km/h	
Azimuth	<=3	0 – 359	
Altitude	<=8	(-)xxxxx.x m	
Longitude	<=11	(-)xxx.xxxxxx	
Latitude	<=10	(-)xx.xxxxxx	
GPS UTC time	14	YYYYMMDDHHMMSS	
MCC	4	XXX	
MNC	4	XXX	
LAC	4	XXXX	
Cell ID	6	XXXXXX	
Reserved	0		
Reserved	0		
battery percentage	3	0-100	
Send time	14	YYYYMMDDHHMMSS	
History Count number	4	0000 – FFFF	
Tail character	1	\$	\$

- ✧ *<Report type>*: If it is successful to fix position the time,the information is report type. If it is not successful to fix position the time,the information is null.

3.3.2. Device Information Report

➤ +RESP:GTINF:

Example: +RESP:GTINF,110100,358688000000158,,0,41,898600810906F8048812,18,99,0,33.23,1,4.19,1,1,1,0,0,20110714104934,100,,,,,3,20110714104934,0014\$			
Parameter	Length (byte)	Range/Format	Default
Firmware Version	6	XX0000 – XXFFFF $X \in \{'A'-'Z', '0'-'9'\}$	
Unique ID	15	IMEI	
Device name	10		
WMS Working Mode	1	0-5	
State	2	41 42	
ICCID	20		
CSQ RSSI	<=2	0 – 31 99	
CSQ BER	<=2	0 – 7 99	
External power supply	1	0 1	
Temperature	5	-30-75℃	
Reserved	0		
Battery voltage	<=4	0.0 – 4.50V	
Charging	1	0 1	
LED mask	<=2	0-FF	
GPS on need	1	0 1	
GPS antenna type	1	0	
GPS antenna state	1	0 1	
Last GPS fix UTC time	14	YYYYMMDDHHMMSS	
battery percentage	3	0-100	
Reserved	0		
Reserved	0		
Reserved	0		
Reserved	0		
Network	1	0-7	
Send time	14	YYYYMMDDHHMMSS	
Count number	4	0000 – FFFF	
Tail character	1	\$	\$

✧ <State>: The current motion state of the device.

41: The device is motionless

42: The device is moving

- ✧ <ICCID>: The ICCID of the installed SIM card.
- ✧ <CSQ RSSI>: The GSM signal strength level.
- ✧ <CSQ BER>: The quality of the GSM signal. This field is always set to 99, which is normal.
- ✧ <External power supply>: Whether the external power supply is connected.
 - 0:** Not connected
 - 1:** Connected
- ✧ <Temperature>: The temperature of the Device.
- ✧ <Battery voltage>: The voltage of the battery.
- ✧ <Charging>: Whether the battery is charging when the external power supply is connected.
 - 0:** Not charging
 - 1:** Charging
- ✧ <LED mask>: The setting of <LED mask> in **AT+GTCFG**.
- ✧ <GPS on need>: The setting of <GPS on need> in **AT+GTCFG**.
- ✧ <GPS antenna type>: A numeric to indicate which GPS antenna is working now.
 - 0:** inside GPS antenna
- ✧ <GPS antenna state>: the status of the working GPS antenna.
 - 0:** The antenna is working
- ✧ <Last GPS fix UTC time>: The UTC time of the latest successful GPS fixing.

3.3.3. WLAN Information Report

- **+RESP:GTWIF:** report the WLAN AP information.
- **+RESP:GTWIFR:** AT+GTRTO-WIFI .

Example:

+RESP:GTWIF,423034,866873025895726,,0,1,bssid1,rssi1,ssid1,,,,,0,3,98,20140714104934,0014\$

+RESP:GTWIFR,423034,866873025895726,,0,1,bssid1,rssi1,ssid1,,,,,0,3,98,20140714104934,0014\$

+RESP:GTWIF,423034,866873025895726,,0,6,6c59400e80b7,-65,mobiletek_17,,,40169fe52f42,-67,MERCURY_E52F42,,,40490f8dee18,-84,HP-Print-18-LaserJet,,,a4dcbe5b00,-85,sunward-1,,,feecda3becc7,-88,YIKAIYE,,,0c4b5496f870,-92,tianying-2.4G,,,460,00,1877,DB0,0,3,30,20190101000427,0010\$

+RESP:GTWIFR,423034,866873025895726,,0,6,40169fe52f42,-60,MERCURY_E52F42,,,6c59400e80b7,-64,mobiletek_17,,,24050f45fba1,-73,hama,,,a4dcbe5b00,-84,sunward-1,,,7ca23e903e40,-87,sunward-2,,,feecda3becc7,-88,YIKAIYE,,,460,00,1877,DB0,0,3,32,20190101000223,0008\$

Parameter	Length (byte)	Range/Format	Default
Firmware Version	6	XX0000 – XXXFFF X ∈ {'A'-'Z','0'-'9'}	
Unique ID	15	IMEI	
Device name	10		
WMS Working Mode	1	0-5	
AP numbers	1	0-6	
BSSID	12		
RSSI	<=4	dbm	
SSID			
Reserved2	0		
Reserved3	0		
MCC	4	0XXX	
MNC	4	0XXX	
LAC	4	XXXX	
Cell ID	6	XXXXXX	
Location Mode	1	0-2	
Network	1	0-7	
battery percentage	3	0-100	
Send time	14	YYMMDDHHMMSS	
Count number	4	0000 – FFFF	
Tail character	1	\$	\$

- ✧ <BSSID>: Basic Service Set. The MAC address of the access point.
- ✧ <RSSI>: receive signal, unit dBm.
- ✧ <SSID>: Service Set Identifier. The name of the access point.
- ✧ <Location Mode>:
 - 0:** to report last known GPS position if there is no GPS fix.
 - 1:** to report WiFi and LBS information if there is no GPS fix.
 - 2:** to report WiFi and LBS information and not to open GPS.

3.3.4. Report for Querying

These are the report of real time querying by command **AT+GTRTO**.

➤ **+RESP:GTGPS:** The report for real time operation GPS

Example: +RESP:GTGPS,110100,358688000000158,,0,1,5,0,001F,001F,0,20110714104934,3,99,20110714104934,0015\$			
Parameter	Length (byte)	Range/Format	Default
Firmware Version	6	XX0000 – XXXFFF $X \in \{'A'\text{'Z'}, '0'\text{'9'}\}$	
Unique ID	15	IMEI	
Device name	10		
WMS Working Mode	1	0-5	
GPS on need	1	0 1	
GPS fix delay	1	1 – 20 mins	
GPS antenna type	1	0	
Report items mask	<=4	0000 – FFFF	
FRI report mask	<=4	0000 – FFFF	
GPS antenna state	1	0 1	
Last GPS fix UTC time	14	YYYYMMDDHHMMSS	
Network	1	0-7	
battery percentage	3	0-100	
Send time	14	YYYYMMDDHHMMSS	
Count number	4	0000 – FFFF	
Tail character	1	\$	\$

✧ **<FRI report mask>**: The setting of <Report mask> in **AT+GTFRI**.

➤ **+RESP:GTALL:** The report to get all configuration

Example: +RESP:GTALL,423031,866873025895726,,BSI,cmnet,,,,,0,SRI,3,,1,220.248.15.178,62208,220.248.15.178,62208,18616660836,0,0,0,,0,,CFG,AIR11,PRIME1,,,1,2,001F,0,60,0EFF,,1,0,300,1,3,0,5,3,,NMD,0,2,2,3,1200,3,0,0,,,,,TMZ,+0000,0,,,FRI,1,0,,10,0000,0000,50,1,,,001F,1000,1000,,,,,0,,GEO,0,0,999.900000,99.900000,1000,2,1,,,,,,1,0,999.900000,99.900000,1000,2,1,,,,,,2,0,999.900000,99.900000,1000,2,1,,,,,,3,0,999.900000,99.900000,1000,2,1,,,,,,4,0,999.900000,99.900000,1000,2,1,,,,,,SPD,0,0,0,60,300,,,,,,FKS,1,1,0,,120,,WLT,1,,,,,,GLM,0,,,,,,PIN,1,1234,0,DOG,0,60,30,0200,,1,,0,0,,,TMP,0,20,1,0,0,,,,,WIF,0,,,,,,GON,,1,0,0,,99,999,,AGP,0,,,,,,360,,WMS,0,60,180,60,2,10,,,,,20181212084841,0091\$			
Parameter	Length (byte)	Range/Format	Default
Firmware Version	6	XX0000 – XXXFFF $X \in \{'A'\text{'Z'}, '0'\text{'9'}\}$	

Unique ID	15	IMEI	
Device name	10		
BSI	3	BSI	BSI
APN	<=40		
APN user name	<=20		
APN password	<=20		
Reserved	0		
Reserved	0		
Reserved	0		
Network Mode	1	0-3	
SRI	3	SRI	SRI
Report mode	1	0-5	
Reserved	0		
Buffer enable	1	0 1	
Main server IP/ domain name	<=60		
Main server port	<=5	0 – 65535	
Backup server IP/ domain name	<=60		
Backup server port	<=5	0 – 65535	
SMS gateway	<=20		
Heartbeat interval	<=3	0 1 – 360 minutes	
SACK enable	1	0 1	
Reserved	0		
Reserved	0		
Enable Heartbeat after shutdown	1	0 1 2	
Reserved	0		
CFG	3	CFG	CFG
New password	4 -6	‘0’ – ‘9’, ‘a’ – ‘z’, ‘A’ – ‘Z’	
Device name	10		
Reserved	0		
Reserved	0		
GPS on need	1	0 1	
GPS fix delay	<=1	1– 20 mins	
Report items mask	<=4	0000 – FFFF	
Reserved	0		
Reserved	0		
Event mask	4	0000 – FFFF	
Reserved	0		
LED mask	<=2	0-FF	
Info report enable	1	0 1	
Info report interval	<=5	30 – 86400 seconds	

MT call mode	1	0 1	
Vibrate Mask	1	3	
Reserved	0		
Reserved	0		
Reserved	0		
Reserved	0		
NMD	3	NMD	NMD
Mode	1	0 – F	
Non-movement duration	<=3	0 – 255(x15 seconds)	
Movement duration	<=2	0 – 10(x100 ms)	
Rest fix interval	5	10 – 3600 seconds	
Rest send interval	5	1 - 24	
Reserved	0		
Reserved	0		
Reserved	0		
Reserved	0		
Reserved	0		
Reserved	0		
Reserved	0		
TMZ	3	TMZ	TMZ
Time zone	5	- +HHMM	
Daylight saving	1	0 1	
Reserved	0		
Reserved	0		
FRI	3	FRI	FRI
Mode	1	0-4	
Invalid position for no fix	1	0-1	
Reserved	0		
Reserved	0		
Begin time	4	HHMM	
End time	4	HHMM	
Check interval1	<=5	10 – 3600 seconds	
Send interval1	<=5	1 - 24	
Reserved	0		
Reserved	0		
Report mask	<=4	0000 – FFFF	
Distance	<=5	300 – 65535 meters	
Mileage	<=5	300 – 65535 meters	
Reserved	0		
Reserved	0		
Reserved	0		

Reserved	0		
Location Mode	1	0-2	
Reserved	0		
GEO	3	GEO	GEO
GEO ID0	1		0
Mode	1	0 – 3	
Longitude	<=11	(+/-)xxx.xxxxxx	
Latitude	<=10	(+/-)xx.xxxxxx	
Radius	<=7	50 – 6000000 meters	
Check interval	<=5	1 - 24	
Reserved	0		
Reserved	0		
Reserved	0		
Reserved	0		
Reserved	0		
Reserved	0		
Reserved	0		
Reserved	0		
GEO ID1	1		1
Mode	1	0 – 3	
Longitude	<=11	(+/-)xxx.xxxxxx	
Latitude	<=10	(+/-)xx.xxxxxx	
Radius	<=7	50 – 6000000 meters	
Check interval	<=5	1 - 24	
Reserved	0		
Reserved	0		
Reserved	0		
Reserved	0		
Reserved	0		
Reserved	0		
Reserved	0		
Reserved	0		
GEO ID2	1		2
Mode	1	0 – 3	
Longitude	<=11	(+/-)xxx.xxxxxx	
Latitude	<=10	(+/-)xx.xxxxxx	
Radius	<=7	50 – 6000000 meters	
Check interval	<=5	1 - 24	
Reserved	0		
Reserved	0		
Reserved	0		
Reserved	0		
Reserved	0		

Reserved	0		
Reserved	0		
Reserved	0		
GEO ID3	1		3
Mode	1	0 – 3	
Longitude	<=11	(+/-)xxx.xxxxxx	
Latitude	<=10	(+/-)xx.xxxxxx	
Radius	<=7	50 – 6000000 meters	
Check interval	<=5	1 - 24	
Reserved	0		
Reserved	0		
Reserved	0		
Reserved	0		
Reserved	0		
Reserved	0		
Reserved	0		
Reserved	0		
GEO ID4	1		4
Mode	1	0 – 3	
Longitude	<=11	(+/-)xxx.xxxxxx	
Latitude	<=10	(+/-)xx.xxxxxx	
Radius	<=7	50 – 6000000 meters	
Check interval	<=5	1 - 24	
Reserved	0		
Reserved	0		
Reserved	0		
Reserved	0		
Reserved	0		
Reserved	0		
Reserved	0		
Reserved	0		
SPD	3	SPD	SPD
Mode	1	0 1 2	
Min speed	<=3	0 – 400 km/h	
Max speed	<=3	0 – 400 km/h	
Duration	<=4	30 – 3600 seconds	
Send interval	<=4	30 – 3600 seconds	
Reserved	0		
Reserved	0		
Reserved	0		
Reserved	0		
Reserved	0		
Reserved	0		

Reserved	0		
Reserved	0		
Reserved	0		
Reserved	0		
Reserved	0		
Reserved	0		
Reserved	0		
Reserved	0		
Reserved	0		
Reserved	0		
FKS	3	FKS	FKS
Power key enable	1	0 1	
Full power up whilst charging	1	0 1	
Function key mode	1	0-4	
Reserved	0		
Reserved	0		
Reserved	0		
Reserved	0		
WLT	3	WLT	WLT
Call filter	1	0 1 2	
White number	20		
White number	20		
White number	20		
White number	20		
White number	20		
White number	20		
White number	20		
White number	20		
White number	20		
White number	20		
Reserved	0		
Reserved	0		
Reserved	0		
Reserved	0		
Reserved	0		
Reserved	0		
Reserved	0		
Reserved	0		
GLM	3	GLM	GLM
Google mode	1	0 1	
Direct number	20		
Direct number	20		
Direct number	20		

Reserved	0		
Reserved	0		
Reserved	0		
Reserved	0		
Reserved	0		
Reserved	0		
Reserved	0		
PIN	3	PIN	PIN
auto unlock PIN	1	0 1	
PIN	4-8	'0' – '9'	
PIN checking	1	0 1	
DOG	3	DOG	DOG
Mode	1	0 1	0
reserved	0		60
Interval	<=2	1 -30 (unit: days)	30
Time	4	HHMM	0200
reserved	0		
Report before reboot	1	0 1	1
reserved	0		
Gsm interval	<=3	0 5-255(unit:min)	0
Pdp interval	<=3	0 4-255(unit:min)	0
reserved	0		
reserved	0		
TMP	3	TMP	TMP
Mode	1	0-3	
Sampling Interval	1-3	1 – 255(×30s)	
Detect duration	1-3	1 – 255(times Sampling Interval)	
High temperature threshold	1-5	-30 – 75℃	
Low temperature threshold	1-5	-30 – 75℃	
reserved	0		
reserved	0		
reserved	0		
reserved	0		
reserved	0		
reserved	0		
WIF	3	WIF	WIF
Mode	1	0 1 2 3	
Ap1 name	<=20		
Ap1 password	<=20		
Ap2 name	<=20		
Ap2 password	<=20		

Ap3 name	<=20		
Ap3 password	<=20		
Reserved	0		
Reserved	0		
Reserved	0		
Reserved	0		
Reserved	0		
Reserved	0		
Reserved	0		
Reserved	0		
Reserved	0		
GON	3	GON	GON
Reserved	0		
Reserved	0		
Reserved	0		
Reserved	0		
Reserved	0		
Reserved	0		
Reserved	0		
Reserved	0		
AGP	3	AGP	AGP
AGPS mode	1	0 1	
Reserved	0		
Reserved	0		
Reserved	0		
Reserved	0		
Reserved	0		
Reserved	0		
Online update interval	<=4	300-1440minutes	
Reserved	0		
WMS	3	WMS	WMS
Working Mode	1	0-5	0
Wakeup Interval	<=4	10-6000Minutes	60
Pursuit Interval	<=5	1-86400sec	180
Sleep Duration	<=5	1-10080(7*24*60)Minutes	60
Time to Change State	<=2	1-99Minutes	2
Delay to Sleep	<=2	10-99Minutes	10
Reserved	0		
Reserved	0		
Reserved	0		
Reserved	0		
Send time	14	YYYYMMDDHHMMSS	

Count number	4	0000 – FFFF	
Tail character	1	\$	\$

➤ **+RESP:GTCID:** The report for real time operation CID

Example:

+RESP:GTCID,110100,

358688000000158,,0,898600810906F8048812,3,20110214093254,0016\$

Parameter	Length (byte)	Range/Format	Default
Firmware Version	6	XX0000 – XXXFFF $X \in \{'A'-'Z', '0'-'9'\}$	
Unique ID	15	IMEI	
Device name	10		
WMS Working Mode	1	0-5	
ICCID	20		
Network	1	0-7	
Send time	14	YYYYMMDDHHMMSS	
Count number	4	0000 – FFFF	
Tail character	1	\$	\$

➤ **+RESP:GTCSQ:** The report for real time operation CSQ

Example:

+RESP:GTCSQ,110100, 358688000000158,,0,18,99,3,20110214093254,0017\$

Parameter	Length (byte)	Range/Format	Default
Firmware Version	6	XX0000 – XXXFFF $X \in \{'A'-'Z', '0'-'9'\}$	
Unique ID	15	IMEI	
Device name	10		
WMS Working Mode	1	0-5	
CSQ RSSI	<=2	0 – 31 99	
CSQ BER	<=2	0 – 7 99	
Network	1	0-7	
Send time	14	YYYYMMDDHHMMSS	
Count number	4	0000 – FFFF	
Tail character	1	\$	\$

➤ **+RESP:GTVR:** The report for real time operation VER

Example: +RESP:GTVR,110100, 358688000000158,,0,TRACKER,010B,0020,3,20110214093254,0018\$			
Parameter	Length (byte)	Range/Format	Default
Firmware Version	6	XX0000 – XXXFFF X ∈ {'A'-'Z','0'-'9'}	
Unique ID	15	IMEI	
Device name	10		
WMS Working Mode	1	0-5	
Device type	10	'0' – '9', 'a' – 'z', 'A' – 'Z'	TRACKER
Firmware version	4	0000 – FFFF	
Hardware version	4	0000 – FFFF	
Network	1	0-7	
Send time	14	YYYYMMDDHHMMSS	
Count number	4	0000 – FFFF	
Tail character	1	\$	\$

- ✧ *<Device type>*: A string represents the type of the device.
- ✧ *<Firmware version>*: The firmware version. The first two characters point out the main version and the last two characters point out the subsidiary version. For example: 010A means the version 1.10
- ✧ *<Hardware version>*: The hardware version. The first two characters point out the main version and the last two characters point out the subsidiary version. For example: 010A means the version 1.10

➤ **+RESP:GTBAT:** The report for real time operation BAT

Example: +RESP:GTBAT,110100, 358688000000158,,0,0,,100,4.20,0,1,3,20110214093254,0019\$			
Parameter	Length	Range/Format	Default

	(byte)		
Firmware Version	6	XX0000 – XXXFFF $X \in \{'A'-'Z', '0'-'9'\}$	
Unique ID	15	IMEI	
Device name	10		
WMS Working Mode	1	0-5	
External power supply	1	0 1	
Reserved	0	0000 – FFFF	
battery percentage	3	0-100	
Battery voltage	<=4	0.0 – 4.50V	
Charging	1	0 1	
LED mask	<=2	0-FF	
Network	1	0-7	
Send time	14	YYYYMMDDHHMMSS	
Count number	4	0000 – FFFF	
Tail character	1	\$	\$

✧ <Device type>: A string represents the type of the device.

➤ +RESP:GTTMZ: The report for real time operation TMZ

Example:

+RESP:GTTMZ,210102,354524044821636,,0,+0000,0,3,20170101000033,0005\$

Parameter	Length (byte)	Range/Format	Default
Firmware Version	6	XX0000 – XXXFFF $X \in \{'A'-'Z', '0'-'9'\}$	
Unique ID	15	IMEI	
Device name	10		
WMS Working Mode	1	0-5	
Time zone offset	5	±HHMM	
Daylight saving	1	0 1	
Network	1	0-7	
Send time	14	YYYYMMDDHHMMSS	
Count number	4	0000 – FFFF	
Tail character	1	\$	\$

3.3.5. Event Report

The following event reports are triggered when certain event occurs.

- +RESP:GTPNA:** Power on report
- +RESP:GTPFA:** Power off report
- +RESP:GTEPN:** The report for connecting external power supply
- +RESP:GTEPF:** The report for disconnecting external power supply
- +RESP:GTBPL:** Battery low report
- +RESP:GTBTC:** Start charging report
- +RESP:GTSTC:** Stop charging report.
- +RESP:GTSTT:** Device motion state indication
- +RESP:GTPDP:** Mobile Data Service PDP connect report
- +RESP:GTSWG:** Switch on or off Geo-Fence 0 via function key
- +RESP:GTGSM:** The report for the information of the service cell and the neighbor cells.
- +RESP:GTDSW:** The report for device sleeping or wakeup.
- +RESP:GTWMS:** The report for device switching to another mode.

In **+RESP:GTEPN**, **+RESP:GTEPF**, **+RESP:GTBTC**, **+RESP:GTSTC**, **+RESP:GTBPL**, **+RESP:GTSTT** and **+RESP:GTSWG** event reports, the last known GPS information and the current GSM network information are involved.

➤ **+RESP:GTPNA:**

Example: +RESP:GTPNA,110100,358688000000158,,0,3,20110214093254,001B\$			
Parameter	Length (byte)	Range/Format	Default
Firmware Version	6	XX0000 – XXXFFF $X \in \{'A'\text{'Z'}, '0'\text{'9'}\}$	
Unique ID	15	IMEI	
Device name	10		
WMS Working Mode	1	0-5	
Network	1	0-7	
Send time	14	YYYYMMDDHHMMSS	
Count number	4	0000 – FFFF	
Tail character	1	\$	\$

➤ **+RESP:GTPFA:**

Example:

+RESP:GTPFA,110100,358688000000158,,0,3,20110214093254,001C\$

Parameter	Length (byte)	Range/Format	Default
Firmware Version	6	XX0000 – XXXFFF $X \in \{'A'-'Z', '0'-'9'\}$	
Unique ID	15	IMEI	
Device name	10		
WMS Working Mode	1	0-5	
Network	1	0-7	
Send time	14	YYYYMMDDHHMMSS	
Count number	4	0000 – FFFF	
Tail character	1	\$	\$

➤ **+RESP:GTEPN:**

Example:

+RESP:GTEPN,110100,358688000000158,,0,0,4.3,92,70.0,121.354335,31.222073,20110214013254,0460,0000,18d8,6141,,0,99,20110214093254,001D\$

Parameter	Length (byte)	Range/Format	Default
Firmware Version	6	XX0000 – XXXFFF $X \in \{'A'-'Z', '0'-'9'\}$	
Unique ID	15	IMEI	
Device name	10		
WMS Working Mode	1	0-5	
GPS accuracy	<=4	0 1 – 50	
Speed	<=5	0.0 – 999.9km/h	
Azimuth	<=3	0 – 359	
Altitude	<=8	(-)XXXXX.X m	
Longitude	<=11	(-)XXX.XXXXXX	
Latitude	<=10	(-)XX.XXXXXX	
GPS UTC time	14	YYYYMMDDHHMMSS	
MCC	4	0XXX	
MNC	4	0XXX	
LAC	4	XXXX	
Cell ID	6	XXXXXX	
Reserved	0		

Network	1	0-7	
battery percentage	3	0-100	
Send time	14	YYYYMMDDHHMMSS	
Count number	4	0000 – FFFF	
Tail character	1	\$	\$

- ✧ *<Last longitude>*: The longitude of the last position. The format is “(-)xxx.xxxxxx” and the value range is from“-180.000000” to “180.000000”. The unit is degree. West longitude is defined as negative starting with minus “-” and east longitude is defined as positive without“+”.
- ✧ *<Last latitude>*: The latitude of the last position. The format is “(-)xx.xxxxxx” and the value range is from“-90.000000” to “90.000000”. The unit is degree. South Latitude is defined as negative starting with minus “-” and north Latitude is defined as positive without “+”.

➤ **+RESP:GTEPF:**

Example:

+RESP:GTEPF,110100,358688000000158,,0,0,4.3,92,70.0,121.354335,31.222073,20110214013254,0460,0000,18d8,6141,,0,99,20110214093254,001E\$

Parameter	Length (byte)	Range/Format	Default
Firmware Version	6	XX0000 – XXFFFF $X \in \{'A'-'Z', '0'-'9'\}$	
Unique ID	15	IMEI	
Device name	10		
WMS Working Mode	1	0-5	
GPS accuracy	<=4	0 1 – 50	
Speed	<=5	0.0 – 999.9km/h	
Azimuth	<=3	0 – 359	
Altitude	<=8	+/- XXXXX.X m	
Last longitude	<=11	+/- XXX.XXXXXX	
Last latitude	<=10	+/- XX.XXXXXX	
GPS UTC time	14	YYYYMMDDHHMMSS	
MCC	4	0XXX	
MNC	4	0XXX	
LAC	4	XXXX	
Cell ID	6	XXXXXX	
Reserved	0		
Network	1	0-7	
battery percentage	3	0-100	
Send time	14	YYYYMMDDHHMMSS	
Count number	4	0000 – FFFF	
Tail character	1	\$	\$

➤ **+RESP:GTBPL:****Example:**

+RESP:GTBPL,110100,358688000000158,,0,3.53,0,4.3,92,70.0,121.354335,31.222073,20110214013254,0460,0000,18d8,6141,,1,99,20110214093254,001F\$

Parameter	Length (byte)	Range/Format	Default
Firmware Version	6	XX0000 – XXFFFF $X \in \{'A'-'Z', '0'-'9'\}$	
Unique ID	15	IMEI	
Device name	10		
WMS Working Mode	1	0-5	
Battery voltage	<=4	0.0 – 4.50V	
GPS accuracy	<=4	0 1 – 50	
Speed	<=5	0.0 – 999.9km/h	
Azimuth	<=3	0 – 359	
Altitude	<=8	+/- XXXXX.X m	
Last longitude	<=11	+/- XXX.XXXXXX	
Last latitude	<=10	+/- XX.XXXXXX	
GPS UTC time	14	YYYYMMDDHHMMSS	
MCC	4	0XXX	
MNC	4	0XXX	
LAC	4	XXXX	
Cell ID	6	XXXXXX	
Reserved	0		
Network	1	0-7	
battery percentage	3	0-100	
Send time	14	YYYYMMDDHHMMSS	

Count number	4	0000 – FFFF	
Tail character	1	\$	\$

➤ **+RESP:GTBTC:**

Example:

+RESP:GTBTC,110100,358688000000158,,0,0,4.3,92,70.0,121.354335,31.222073,20110214013254,0460,0000,18d8,6141,,0,99,20110214093254,0020\$

Parameter	Length (byte)	Range/Format	Default
Firmware Version	6	XX0000 – XXXFFF X ∈ {'A'-'Z','0'-'9'}	
Unique ID	15	IMEI	
Device name	10		
WMS Working Mode	1	0-5	
GPS accuracy	<=4	0 1 – 50	
Speed	<=5	0.0 – 999.9km/h	
Azimuth	<=3	0 – 359	
Altitude	<=8	+/- XXXXX.X m	
Last longitude	<=11	+/- XXX.XXXXXX	
Last latitude	<=10	+/- XX.XXXXXX	
GPS UTC time	14	YYYYMMDDHHMMSS	
MCC	4	0XXX	
MNC	4	0XXX	
LAC	4	XXXX	
Cell ID	6	XXXXXX	
Reserved	0		

Network	1	0-7	
battery percentage	3	0-100	
Send time	14	YYYYMMDDHHMMSS	
Count number	4	0000 – FFFF	
Tail character	1	\$	\$

➤ **+RESP:GTSTC:****Example:**

+RESP:GTSTC,110100,358688000000158,,0,,0,4.3,92,70.0,121.354335,31.222073,20110214013254,0460,0000,18d8,6141,,0,99,20110214093254,0021\$

Parameter	Length (byte)	Range/Format	Default
Firmware Version	6	XX0000 – XXXFFF X ∈ {'A'-'Z','0'-'9'}	
Unique ID	15	IMEI	
Device name	10		
WMS Working Mode	1	0-5	
Reserved	0		
GPS accuracy	<=4	0 1 – 50	
Speed	<=5	0.0 – 999.9km/h	
Azimuth	<=3	0 – 359	
Altitude	<=8	+/- XXXXX.X m	
Last longitude	<=11	+/- XXX.XXXXXXX	
Last latitude	<=10	+/- XX.XXXXXXX	
GPS UTC time	14	YYYYMMDDHHMMSS	
MCC	4	0XXX	
MNC	4	0XXX	
LAC	4	XXXX	
Cell ID	6	XXXXXX	
Reserved	0		
Network	1	0-7	
battery percentage	3	0-100	
Send time	14	YYYYMMDDHHMMSS	
Count number	4	0000 – FFFF	
Tail character	1	\$	\$

➤ **+RESP:GTSTT:****Example:**

+RESP:GTSTT,110100,358688000000158,,0,41,0,4.3,92,70.0,121.354335,31.222073,20110214013254,0460,0000,18d8,6141,,0,99,20110214093254,0022\$

Parameter	Length (byte)	Range/Format	Default
-----------	------------------	--------------	---------

Firmware Version	6	XX0000 – XXXFFF X ∈ {'A'-'Z','0'-'9'}	
Unique ID	15	IMEI	
Device name	10		
WMS Working Mode	1	0-5	
State	2	41 42	
GPS accuracy	<=4	0 1 – 50	
Speed	<=5	0.0 – 999.9km/h	
Azimuth	<=3	0 – 359	
Altitude	<=8	+/- XXXXX.X m	
Last longitude	<=11	+/- XXX.XXXXXX	
Last latitude	<=10	+/- XX.XXXXXX	
GPS UTC time	14	YYYYMMDDHHMMSS	
MCC	4	0XXX	
MNC	4	0XXX	
LAC	4	XXXX	
Cell ID	6	XXXXXX	
Reserved	0		
Network	1	0-7	
battery percentage	3	0-100	
Send time	14	YYYYMMDDHHMMSS	
Count number	4	0000 – FFFF	
Tail character	1	\$	\$

➤ **+RESP:GTPDP:**

Example: +RESP:GTPDP,110100,358688000000158,,0,3,20110214093254,011D\$			
Parameter	Length (byte)	Range/Format	Default
Firmware Version	6	XX0000 – XXXFFF X ∈ {'A'-'Z','0'-'9'}	
Unique ID	15	IMEI	
Device name	10		
WMS Working Mode	1	0-5	
Network	1	0-7	

Send time	14	YYYYMMDDHHMMSS	
Count number	4	0000 – FFFF	
Tail character	1	\$	\$

➤ **+RESP:GTSWG:****Example:**

+RESP:GTSWG,110100,358688000000158,,1,1,0,2.1,0,27.1,121.390717,31.164424,20110901073917,0460,0000,1878,0873,,0,99,20110901154653,0015\$

Parameter	Length (byte)	Range/Format	Default
Firmware Version	6	XX0000 – XXFFFF $X \in \{'A'-'Z', '0'-'9'\}$	
Unique ID	15	IMEI	
Device name	10		
WMS Working Mode	1	0-5	
Geo active	1	0 1	
GPS accuracy	<=4	0 1 – 50	
Speed	<=5	0.0 – 999.9km/h	
Azimuth	<=3	0 – 359	
Altitude	<=8	+/- XXXXX.X m	
Last longitude	<=11	+/- XXX.XXXXXX	
Last latitude	<=10	+/- XX.XXXXXX	
GPS UTC time	14	YYYYMMDDHHMMSS	
MCC	4	0XXX	
MNC	4	0XXX	
LAC	4	XXXX	
Cell ID	6	XXXXXX	
Reserved	0		
Network	1	0-7	
battery percentage	3	0-100	
Send time	14	YYYYMMDDHHMMSS	
Count number	4	0000 – FFFF	
Tail character	1	\$	\$

✧ *<Geo active>*: A numeric to indicate to activate or deactivate Geo-Fence 0 by the long press of the function key.

0: deactivate Geo-Fence 0

1: activate Geo-Fence 0

➤ **+RESP:GTGSM:****Example:**

+RESP:GTGSM,210102,354524044814581,lile,0,RTO,460,00,1877,873,15,,460,00,1877,873,1

5,,460,00,1877,873,15,,460,00,1877,873,15,,460,00,1877,873,15,,460,00,1877,873,15,,460,00,1877,873,23,3,99,20161104091124,000A\$			
Parameter	Length (byte)	Range/Format	Default
Firmware Version	6	XX0000 – XXXFFF $X \in \{'A'-'Z', '0'-'9'\}$	
Unique ID	15	IMEI	
Device name	10		
WMS Working Mode	1	0-5	
Fix type	3	RTO	
MCC1	4	0XXX	
MNC1	4	0XXX	
LAC1	4		
Cell ID1	4		
Rx Level1	2	0-63	
Reserved1	0		
MCC2	4	0XXX	
MNC2	4	0XXX	
LAC2	4		
Cell ID2	4		
Rx Level2	2	0-63	
Reserved2	0		
MCC3	4	0XXX	
MNC3	4	0XXX	
LAC3	4		
Cell ID3	4		
Rx Level3	2	0-63	
Reserved3	0		
MCC4	4	0XXX	
MNC4	4	0XXX	
LAC4	4		
Cell ID4	4		
Rx Level4	2	0-63	
Reserved4	0		
MCC5	4	0XXX	
MNC5	4	0XXX	
LAC5	4		
Cell ID5	4		
Rx Level5	2	0-63	
Reserved5	0		
MCC6	4	0XXX	
MNC6	4	0XXX	

LAC6	4		
Cell ID6	4		
Rx Level6	2	0-63	
Reserved6	0		
mcc	4	0XXX	
mnc	4	0XXX	
lac	4		
cellid	4		
CSQ RSSI	<=2	0 – 31 99	
Network	1	0-7	
battery percentage	3	0-100	
Send time	14	YYYYMMDDHHMMSS	
Count number	4	0000 – FFFF	
Tail character	1	\$	\$

- ✧ <Network>: The current working network of the device.
0: GSM.
1: RESERVE.
2: UTRAN.
3: GSMW/EGPS.
4: UTRANW/HSDPA.
5: UTRANW/HSUPA.
6: UTRANW/HSDPA and HSUPA.
7: E-UTRAN.
- ✧ <MCCi>: MCC of the neighboring cell i (i is the index of the neighboring cell).
- ✧ <MNCi>: MNC of the neighboring cell i.
- ✧ <LACi>: LAC (in hex format) of the neighboring cell i.
- ✧ <Cell IDi>: Cell ID (in hex format) of the neighboring cell i.
- ✧ <Rx Leveli>: The signal strength of the neighboring cell i. This parameter is a 6-bit value coded in 1 dB steps:
0:-110 dBm
1 to 62: -109 to -48 dBm
63:-47 dBm
- ✧ <Reservedi>: The reserved field for the neighboring cell i.

➤ **+RESP:GTWMS:**

Example: +RESP:GTWMS,423031,866873025895726,,1,0,0,0.4,258,69.8,121.391650,31.164202,20181212091559,460,00,1877,8549,3,99,20181212092541,00BD\$			
Parameter	Length (byte)	Range/Format	Default
Firmware Version	6	XX0000 – XXXFFF	

		$X \in \{'A'-'Z','0'-'9'\}$	
Unique ID	15	IMEI	
Device name	10		
Previous Working Mode	1	1 2 3 4 5	
Current Working Mode	1	0	
GPS accuracy	≤ 4	0 1 – 50	
Speed	≤ 5	0.0 – 999.9km/h	
Azimuth	≤ 3	0 – 359	
Altitude	≤ 8	+/- XXXXX.X m	
Last longitude	≤ 11	+/- XXX.XXXXXX	
Last latitude	≤ 10	+/- XX.XXXXXX	
GPS UTC time	14	YYYYMMDDHHMMSS	
MCC	4	0XXX	
MNC	4	0XXX	
LAC	4	XXXX	
Cell ID	6	XXXXXX	
Network	1	0-7	
battery percentage	3	0-100	
Send time	14	YYYYMMDDHHMMSS	
Count number	4	0000 – FFFF	
Tail character	1	\$	\$

- ✧ <Previous Working Mode>: The working mode before entering normal mode.
- ✧ <Current Working Mode>: The current working mode of the device.

➤ **+RESP:GTDSW:**

Example: +RESP:GTDSW,423031,866873025895726,,1,0,10,,,,0,0.4,258,69.8,121.391650,31.164202,20181212091559,460,00,1877,8549,3,99,20181212093026,00C2\$			
Parameter	Length (byte)	Range/Format	Default
Firmware Version	6	XX0000 – XXXFFF $X \in \{'A'-'Z','0'-'9'\}$	
Unique ID	15	IMEI	
Device name	10		
Current Working Mode	1	1 2 3 4 5	
Report Type	1	0 1	
Time to Wakeup	≤ 5	1-10080(7*24*60)Minutes	
Reserved	0		
Reserved	0		

Reserved	0		
GPS accuracy	<=4	0 1 – 50	
Speed	<=5	0.0 – 999.9km/h	
Azimuth	<=3	0 – 359	
Altitude	<=8	+/- XXXXX.X m	
Last longitude	<=11	+/- XXX.XXXXXX	
Last latitude	<=10	+/- XX.XXXXXX	
GPS UTC time	14	YYYYMMDDHHMMSS	
MCC	4	0XXX	
MNC	4	0XXX	
LAC	4	XXXX	
Cell ID	6	XXXXXX	
Network	1	0-7	
battery percentage	3	0-100	
Send time	14	YYYYMMDDHHMMSS	
Count number	4	0000 – FFFF	
Tail character	1	\$	\$

✧ <Report Type>: The type of the report.

0: Device sleep.

1: Device wakeup.

✧ <Time to Wakeup>: The amount of time to wakeup if the <Report Type> is 0.

3.3.6. Buffer Report

If BUFFER function is enabled, the terminal will save the message into the BUFFER in the following circumstances.

- ✧ No GSM or WCDMA signal.
- ✧ Failed to activate Mobile Data Service context for the TCP or UDP connection.
- ✧ Failed to establish the TCP connection with the backend server.

These messages will be sent to the backend server after the message can be sent to the backend server. The device can save up to 720 messages if the length of each buffered message is not greater than 160.

- ✧ **+RESP** messages can be buffered except **+RESP:GTALL**
- ✧ **+ACK** messages can be buffered
- ✧ In the buffer report, the original header string “+RESP” is replaced by “+BUFF” while keeps the other content untouched including the original sending time and count number.
- ✧ In the buffer report, the original header string “+ACK” is replaced by “+BCK” while keeps the other content untouched including the original sending time and count number.

Example:

The following is an example of the buffered message:

```
+BUFF:GTFRI,423031,866873025895726,,0,1,1,0,1,16,0,0,351,51.6,121.391063,31.164633,201
81212072535,460,00,1877,DAE,00,3,85,20181212072535,002C$
+BCK:GTFRI,423038,869912030076182,ATWG7,0007,20190417055553,000A$
```

3.3.7. Report Google Maps hyperlink

According to the setting of the command **AT+GTGLM** and the configuration of MT call mode, the device can send a SMS with Google Maps hyperlink to a mobile phone.

If MT call mode is set to 1, ATW will sent its current position to the incoming call via SMS with Google Maps hyperlink if the incoming call is a direct number (Please refer to *<direct number list>* in the chapter 3.2.13) or a white call (Please refer to *<white number list>* in the chapter 3.2.12).

If the *<Google link mode>* was set as 1 in the command **AT+GTGLM**, ATW will send a SMS with Google Maps hyperlink to the direct phone numbers after the message **+RESP:GTSOS** and **+RESP:GTGEO**.

➤ **Google Maps hyperlink**

Example 1 (old style):

SOS:

```
http://maps.google.com/maps?q=-27.491107,153.095529 NAME F1 UTC 2012/05/28
07:26:51 B97
```

Example 2:**SOS:**

<http://maps.google.com/maps?q=31.222073,121.354335+%28NAME%20F1%20UTC%202011/10/01%2009:05:32%20B33%29>

Parameter	Length (byte)	Range/Format	Default
SMS header	<=30		
Google Maps hyperlink	<=77		
Device name	<10	NAME	
GPS fix	2	F1 F0	
GPS UTC time	20	YYYY/MM/DD HH:MM:SS	
battery level	<=5	B1-100%	

- ✧ <SMS header>: A string that includes the terminal name set in the command **AT+GTGLM** and GPS fix type ("**SOS**", "**IN GEO-i**", "**OUT GEO-i**", "**LBC**").
- ✧ <Google Maps hyperlink>: A string of a Google map hyperlink.

3.3.8. Temperature Report

➤ **+RESP:GTTMP:**

Example:

+RESP:GTTMP,110100,358688000000158,,0,2,60,1,1,4,3,92,70.0,121.354335,31.222073,20110214013254,0460,0000,18d8,6141,00,3,80,20110214093254,000F\$

Parameter	Length (byte)	Range/Format	Default
Firmware Version	6	XX0000 – XXXFFF X ∈ {'A'-'Z','0'-'9'}	
Unique ID	15	IMEI	
Device name	10		
WMS Working Mode	1	0-5	
State	1	1 2	
Temperature	<=5	-30-75℃	
Number	1	1	
GPS accuracy	<=4	0 1 – 50	
Speed	<=5	0.0 – 999.9km/h	
Azimuth	<=3	0 – 359	
Altitude	<=8	(-)xxxxx.x m	
Longitude	<=11	(-)xxx.xxxxxx	
Latitude	<=10	(-)xx.xxxxxx	
GPS UTC time	14	YYYYMMDDHHMMSS	
MCC	4	0XXX	
MNC	4	0XXX	
LAC	4	XXXX	

Cell ID	6	XXXXXX	
Reserved	2	00	00
Network	1	0-7	
battery percentage	3	0-100	
Send time	14	YYYYMMDDHHMMSS	
Count number	4	0000 – FFFF	
Tail character	1	\$	\$

✧ <State>:

1: Temperature is greater than <High temperature threshold>.

2: Temperature is less than <Low temperature threshold>.

✧ <Temperature>: Temperature. Unit: °C

3.3.9. Exception Report

Anytime, there will be an exception report sent to the backend server if an error occurs, such as wrong password is set, or invalid symbol is found in the parameters.

EXPT:

Example:			
EXPT:WRONG PASSWORD,GTQSS,password,AIR10\$			
Parameter	Length (byte)	Range/Format	Default
Exception type	20		
Command	20		
Parameter	20		
Exception info	14		
Tail character	1	\$	\$

✧ <Exception type>: the string will indicate what kind of exception is happened, which include **INVALID COMMAND, WRONG PASSWORD, DATA OVERFLOW, WRONG SYMBOL**

✧ <Command>: the corresponding command which error occurs.

✧ <Parameter>: the wrong setting parameters.

✧ <Exception type>: the wrong setting parameter value

3.4.Heartbeat

Heartbeat is used to maintain the contact between the device and the backend server if communicating via Mobile Data Service. The heartbeat package is sent to the backend server at the interval defined by <Heartbeat interval> in AT+GTQSS or AT+GTSRI command.

➤ **+ACK:GTHBD:**

Example: +ACK:GTHBD,110100,358688000000158,,20110214093254,0025\$			
Parameter	Length (byte)	Range/Format	Default
Firmware Version	6	XX0000 – XXXFFF $X \in \{'A'\text{'-'}'Z'\text{'-'}'0'\text{'-'}'9'\}$	
Unique ID	15	IMEI	
Device name	10		
battery percentage	3	0-100	
Send time	14	YYYYMMDDHHMMSS	
Count number	4	0000 – FFFF	
Tail character	1	\$	\$

Whenever the backend server receives a heartbeat package, it should reply an acknowledgement to the device.

➤ **+SACK:GTHBD:**

Example: +SACK:GTHBD,110100,0026\$			
Parameter	Length (byte)	Range/Format	Default
Firmware Version	6	XX0000 – XXXFFF $X \in \{'A'\text{'-'}'Z'\text{'-'}'0'\text{'-'}'9'\}$	
Count number	4	0000 – FFFF	
Tail character	1	\$	\$

✧ <Count number>: The backend server uses the <Count number> extracted from the heart beat package from the device as the <Count number> in the server acknowledgement of the heartbeat.

NOTE: please pay more attention here.

1 the Heartbeat function should be used only in TCP long connection ,TCP short connection and UDP mode.

3.5. Sever Acknowledgement

If server acknowledgement is enabled by **AT+GTQSS** or **AT+GTSRI** command, the backend server should reply to the device whenever it receives a report message from the device.

➤ **+SACK:**

Example: +SACK:0027\$			
Parameter	Length (byte)	Range/Format	Default
Count number	4	0000 – FFFF	
Tail character	1	\$	\$

- ✧ *<Count number>*:The backend server uses the *<Count number>* extracted from the received message as the *<Count number>* in the server acknowledgement.

4. LED Indication

Light	Event	State
GPS LED	GPS signal valid	Fast flash
	GPS turned off, GPS signal invalid	Dark
	Power key was pressed and prepare to power on	Solid
GSM LED	Network has been registered	Slow flash
	Power off	Dark
	Power key was pressed and prepare to power on	Solid
Power LED	Power on and normal	Dark
	Fully charged	Solid
	In charging	Slow flash
	Power key was pressed and prepare to power off	Solid
	Power key was pressed and prepare to power on	Solid
WIFI LED	WIFI on	Slow flash
	Power key was pressed and prepare to power on	Solid

Appendix: Message Index

✧ Command and ACK

AT+GTQSS

+ACK:GTQSS

AT+GTBSI

+ACK:GTBSI

AT+GTSRI

+ACK:GTSRI

AT+GTCFG

+ACK:GTCFG

AT+GTTMA

+ACK:GTTMA

AT+GTFRI

+ACK:GTFRI

AT+GTGEO

+ACK:GTGEO

AT+GTSPD

+ACK:GTSPD

AT+GTFKS

+ACK:GTFKS

AT+GTRTO

+ACK:GTRTO

AT+GTWLT

+ACK:GTWLT

AT+GTGLM

+ACK:GTGLM

AT+GTDOG

+ACK:GTDOG

AT+GTWIF

+ACK:GTWIF

AT+GTWMS

+ACK:GTWMS

✧ Position Related Report

+RESP:GTFRI

+RESP:GTGEO

+RESP:GTSPD

+RESP:GTSOS

+RESP:GTRTL

+RESP:GTLBC

+RESP:GTLBS

+RESP:GTPNL
+RESP:GTNMR
+RESP:GTGCR
+RESP:GTDOG
+RESP:GTHIS
+RESP:GTWIF

✧ **Device Information Report**

+RESP:GTINF

✧ **Report for Querying**

+RESP:GTGPS
+RESP:GTALL
+RESP:GTCID
+RESP:GTCSQ
+RESP:GTVER
+RESP:GTBAT
+RESP:GTTMZ

✧ **Event Report**

+RESP:GTPNA
+RESP:GTPFA
+RESP:GTEPN
+RESP:GTEPF
+RESP:GTBTC
+RESP:GTSTC
+RESP:GTBPL
+RESP:GTSTT
+RESP:GTPDP
+RESP:GTSWG
+RESP:GTWIF
+RESP:GTWMS
+RESP:GTDSW
EXPT

✧ **Heartbeat**

+ACK:GTHBD
+SACK:GTHBD

✧ **Server Acknowledgement**

+SACK